Register Facility Help File

IESO

Issue: 8.0

Issue Date: 03/02/2022

LST-48



Disclaimer

This document is for informational purposes only and contains the required attributes that need to be submitted in the process of registering a facility, its associated equipment, and resources through online IESO. If at any time you have questions or require clarifications on any of the attributes listed below please contact Market Registration via email at market.registration@ieso.ca

Copyright © 2019 Independent Electricity System Operator. All rights reserved.

Table of Contents

1 F	Facility (Substation)	6
1.1	.1 Supporting Documents	13
1.2	.2 Facility Contact	16
1.3	.3 Restoration Plan Attachment	16
1.4	.4 UFLS Area	17
1.5	.5 Voltage Level	17
1.6	.6 Special Protection System (SPS)	18
1.7	.7 Control Centre	20
1.8	.8 GIC Bus	22
1.9	.9 Earth Model	22
1.1	.10 Earth Model Layer	22
2 6	Generating Unit	23
2.1	.1 Synchronous Machine	31
2.2	.2 Induction Machine	33
2.3	.3 Wind Turbine	35

LST-48 Re	Register Facility Help File v8.0.docx	
2.3.1	Solar Generation Devices	37
2.4	PV Inverter	37
2.5	Solar Array	38
2.6	Collector System	45
3 Load	ad	47
3.1	Induction Motor (≥ 500 HP)	51
3.2	Large Induction Motor (≥ 13,500 HP)	53
3.3	Synchronous Motor (≥ 500 HP)	54
3.4	Large Synchronous Motor (≥ 13500 HP)	55
4 Dyn	namic Model	56
4.1	Technology Type	58
4.2	Dynamic Model Type	59
4.3	Dynamic Model Name	60
4.4	Dynamic Model Parameter	60
4.5	Dynamic Model Parameter Value	61
5 Trar	nsformer	63
5.1	Transformer Phase	67
5.2	Winding	71
5.3	ULTC	72
5.4	OLTC	73
5.5	Winding Pair Impedance	74
6 Circ	cuit	76
6.1	Overhead Circuit Section	78
6.2	Underground Circuit Section	87
6.3	Parallel Circuit Section Mutual Impedance	94
6.4	Shared Towers	95

7 F	FACTS Devices	96
7.1.	1 Static VAR Compensator (SVC)	97
7.1.	2 Thyristor Controlled Reactor	100
7.1.	3 Thyristor Switched Capacitor	102
7.1.	4 Thyristor Switched Reactor	103
7.1.	5 Fixed Capacitor	105
7.1.	6 Static Synchronous Compensator (STATCOM)	106
7.1.	.7 Series Capacitor	109
8 N	Meteorological Collection Devices	111
8.1.	1 Meteorological Coverage Map	115
8.1.	2 Meteorological Tower	116
8.1.	3 Nacelle Mounted	117
9 0	Other Equipment	117
9.1	Switch	117
9.1.	.1 Circuit Switcher	117
9.1.	2 Disconnect Switch	120
9.1.	.3 Circuit Breaker	123
9.1.	.4 Opener	125
9.1.	5 Switches excluded from online facility registration	128
9.2	Capacitors and Reactors	130
9.2.	.1 Shunt Capacitor	130
9.2.	2 Shunt Reactor	132
9.2.	.3 Bus	134
9.2.	.4 Equipment Outage Viewer Group	136
9.2.	5 UFLS Relay Group	136
9.2.	.6 Master data verification	138

10	Resou	urces	
1	0.1	Connection Point	139
1	0.1.1	Generator Resource	140
1	0.1.2	Pseudo Unit	162
1	0.1.3	Load Resource	164
1	0.1.4	Transmission Connection Resource	168
1	0.1.5	Transmission Network Resource	171
1	0.2	Settlement Compliance Aggregation Model	174
1	0.3	Operations Compliance Aggregation Model	175
11	Dema	and Response	177
1	1.1	DR Resource	177
1	1.2	Resource DR Participations (lookup table)	179
1	1.3	Demand Response Resource Commitment	179
1	1.4	DR Contributor	180
1	1.5	Virtual DR Contributor	181
1	1.6	Residential DR Contributor	181
1	1.7	Non-Residential DR Contributor	182
1	1.8	DR Contributor SLD	182
1	1.9	DR Contributor ROI	183
1	1.10	DR Behind the Meter Generator	183
12	Capac	city Commitments	185
1	2 1	Canacity Resource Commitment	185

LST-48 Register Facility Help File v8.0.docx **Facility (Substation)**

Facility is designated BPS/BES if at least one piece of equipment within the facility is designated as a BPS/BES element.

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Substation Name	Purpose: Unique name used to identify physical facility in communications by participant, transmitter or IESO.	Participant	Free text	Note this is one of the attributes that the IESO Market Registration department may override after consultation with the participant and transmitter.	N/A	M
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Provisional Facility Name	Purpose: Unique name used pending a registration request to rename the facility. Provisional name to identify facility in communications by participant, transmitter or IESO. Expected in cases where the participant organization changes ownership (and where only that one participant owns equipment at the facility)	IESO	Free text	N/A	N/A	M
Comments		Participant	Free text	N/A	N/A	0

LST-48 Register Facility Help File v8.0.docx

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Substation Class	Purpose: Indicate functional purpose of substation.	IESO	Drop Down	Generation, load, transmission, distribution	N/A	M
Substation Sub-Class	Purpose: Indicate functional purpose of substation.	IESO	Drop Down (dependent on substation class)	Customer Generation Station (CGS) Customer Transformer Station (CTS) Distribution Station (DS) Generation Station (GS) Municipal Transformer Station (MTS) Mobile Utility Station (MUS) Transformer Station (TS) Wind Generation Station (WGS) Tie Line (TL)	N/A	M

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Sub-region	Purpose: Substation is organized by electrical area for Regional Planning purposes.	IESO	Drop Down	Burlington-to-Nanticoke, Greater Ottawa, GTA North, GTA West, Kitchener-Waterloo- Cambridge-Guelph, Metro Toronto, Northwest Ontario, Windsor-Essex, East Lake Superior, GTA East, London Area, Peterborough-to-Kingston, South Georgian Bay and Muskoka, Sudbury and Algoma, Chatham- Lambton-Sarnia, Greater Bruce Area, Niagara, North of Moosonee, North-East of Sudbury, Renfrew, St. Lawrence	N/A	M
Electrical Zone	Purpose: Substations is organized by electrical area for IESO Operations purposes.	System	Drop Down	Northeast, Northwest, Essa, Toronto, East, Ottawa, South, Southwest, Niagara, Bruce	N/A	М

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Global Positioning	Purpose: Substation global position	Participant	Numeric Text	Example	Decimal	0
System North	North (Latitude)		(North is	43°N,23 minutes ,00	Degrees	
			default) The	seconds		
			latitude falls			
			within 40-50	Would be entered as		
			degrees N			
			and the	43.38333		
			longitude			
			falls within			
			70-90degrees			
			W (see above			
			for			
			explanation			
			of negative			
			values, can			
			be ok in			
			some cases)			

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Global Positioning System West	Purpose: Substation global position West (Longitude)	Participant	Numeric Text (West is default) The latitude falls within 40-50 degrees N and the longitude falls within 70-90degrees W (see above for explanation of negative values, can be ok in some cases)	Example 79° W,42 minutes, 00 seconds Would be entered as 79.7000	Degrees	0
Connection Type	Purpose: Defines type of connection to the IESO-controlled grid	IESO	Drop Down	Directly Connected/Embedded	N/A	M
Telemetry Performance Classification	Purpose: Defines telemetry quality/performance based on market rules	IESO	Drop Down	High, Medium, Low, N/A	N/A	М
Telemetry Size Classification	Purpose: Defines telemetry quality/performance based on size market rules	IESO	Drop Down	Small, Significant, Major, Minor, Small, N/A	N/A	М
Special Protection System (SPS)/Remedial Action Scheme (RAS) Participation	Purpose: Defines whether the substation will/has installed physical equipment that allows participation in a specific SPS/RAS	IESO	Drop Down	Y/N, N/A	N/A	М

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Key Restoration Facility	Substation is used to establish a basic minimum power system following a system blackout. These facilities are essential to the restoration of the area and include: Generating stations having black start units Other selected generating stations Transmission elements that are part of the basic minimum power system Participant control centres Telecommunication centres: Telecommunication facilities that are necessary to support protection and control facilities Voice and data between control centres Voice and data between control centres and key generating/transmission substations	IESO	Boolean	Y/N	N/A	M
Address 1	Substation address line 1	Participant	Free text	N/A	N/A	M
Address 2	Substation address line 2	Participant	Free text	N/A	N/A	0
Address 3	Substation address line 3	Participant	Free text	N/A	N/A	0
Postal Code/Zip Code	Postal code of the substation	Participant	Applicable code format	Based on Country selected	N/A	М
City	City where substation resides	Participant	Free text	N/A	N/A	М
Province/State	Province where substation resides	Participant	Drop down	Default Ontario	N/A	М

LST-48 Register Facility Help File v8.0.docx

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Country	Country where substation resides	Participant	Drop Down	Default Canada	N/A	M
Ground DC Resistance	Purpose: Substation grounding DC resistance.	Participant	Decimal number	≥0	Ohms	М
RG Flag	Purpose: Method used to specify grounding DC resistance value.	Participant	Dropdown	Assumed, measured, calculated, ungrounded	N/A	M
GIC Comment	Purpose: Participant supplied comments.	Participant	Text	N/A	N/A	0

1.1 Supporting Documents

The Supporting documents are not equipment and will not have op nom or equipment name.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Supporting Document Type	Purpose: The type of supporting document (see value range)	System	Drop down	 Connection agreement Control schemes description Operating Philosophy Document Protection system description Restoration Plan Attachment Single line diagram Telemetry workbook Elapsed Time to Dispatch PCG supporting technical information 	N/A	M
Supporting Document	Purpose: One of a document set that provides additional documentation for a facility and organization (see value range)	Participant	Upload Document	Connection Agreement: This is the agreement between the transmitter or the distributor with the participant Control Schemes Description Document: This is a document that details the method of controlling the equipment outputs in relation to changes in input quantities	N/A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
				Operating Philosophy		
				Document: This is a		
				document that details		
				how the		
				facility/substation		
				operates		
				Protection System		
				Description Document : A		
				document that details		
				how the protections		
				operate at a facility		
				substation.		
				Restoration Plan		
				Attachment: Document		
				submitted at an		
				organizational level that		
				documents their		
				restoration plan (i.e. outlines how they will		
				meet obligations to		
				support the OPSRP).		
				Single Line Diagram		
				(facility): This is the		
				distributor/transmitter		
				approved single line		
				diagram		
				Telemetry Workbook: An		
				excel workbook that		
				defines the status and		

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
		Бу		analog telemetering points the participant shall provide to the IESO (defined by IESO, completed by participant) Elapsed Time to Dispatch: This is a document that describes in detail the minimum amount of time, in minutes, between the time at which a start-up sequence is initiated for a generation unit and the time at which it becomes dispatchable by reaching its minimum loading point; PCG Supporting Technical Information: Mandatory if participating in PCG program (formerly form 1552) This is a technical document that supports	measurement	
Supporting document comments	Purpose: IESO supplied comments.	IESO	Text	the registration values submitted for MRT, MGBRT, and MLP by the participant.		0

1.2 Facility Contact

The relationship between a contact and a facility role. Specifically, it is the point of contact for a person or organization section fulfilling a particular facility role.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Selected Phone Number	An indication of which phone number the person would like to be contacted at for this particular facility contact. The possible values are: Main Phone, Alternate Phone 1 or Alternate Phone 2.	Participant	Text	N/A		М
Selected Email	An indication of which email the person would like to be contacted at for this particular facility contact. The possible values are: Main Email, Alternate Email 1 or Alternate Email 2.	Participant	Number	N/A		М

1.3 Restoration Plan Attachment

Restoration Plan Attachments are not equipment and will not have op nom or equipment name.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Restoration Plan Attachment	Purpose: Document submitted at an organizational level that documents their restoration plan (i.e. outlines how they will meet obligations to support the OPSRP). Required if the organization is designated as a restoration participant during the SIA process. Based on this, the Compliance	Participant	Upload Document	N/A	N/A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
	Assurance SME will require a RPA during Register Equipment.					
Organization Id	Purpose: Id of the organization providing the RPA	System	Integer	N/A	N/A	М

1.4 UFLS Area

Ontario is divided into 3 UFLS areas for the purpose of UFLS implementation.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
UFLS Area Name	Purpose: Name used to identify the area in which a facility (containing at least one UFLS Relay Group) resides.	IESO	Text	North West Central The value is derived from electrical zone	N/A	M
UFLS Area Outage Margin	Purpose: The maximum allowable percentage of UFLS load that may be shed in an UFLS Area at the same time. It's used to conduct UFLS threshold validation for outage management.	IESO	Numeric	-100.00 to +100.00	%	М

1.5 Voltage Level

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
System Voltage	Purpose: Base system voltage	Participant	Drop Down	720, 500, 345, 230, 115, LT	N/A	M
	Please select the closest base system					
	voltage to your equipment.					

1.6 Special Protection System (SPS)

Special protection systems ("SPS") have been installed in a number of locations on the IESO-controlled grid which automatically initiate one or more of the following control actions: load rejection, generation rejection, generation runback, shunt capacitor switching, shunt reactor switching, and cross-tripping.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Equipment Name	Unique name for the equipment within a specified scope (e.g. windings unique within transformer but not within facility)	IESO	Free Text but must be unique	N/A	N/A	M
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
SPS Status	Purpose: Reflect the most recent update on the SPS. New: A completely new SPS is proposed. Modified: Last major change made to the SPS. It could be to incorporate a new facility or protection settings changed etc. Reclassified – SPS that had the NPCC SPS Classification (type) changed. For example due to system changes, a Type III SPS might have to be reclassified as Type I. (NPCC Directory 7, 1.6.2.2.2) Retired – SPS retired from service and is no longer available.	System (new) IESO (confirm, enter or change)	Drop Down	New, Modified, Reclassified, Retired	N/A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Transmission Zone (electrical zone)	Zones corresponding to major interfaces, categorized geographically, and based on generation resources.	System from facility	Drop Down	Bruce, East, Essa, Niagara, Northeast, Northwest, Ottawa, Southwest, Toronto, West	N/A	M
SPS Design	Purpose: Selection of designed trigger(s) that initiate SPS action.	IESO	Drop Down (ability should be provided for selection of both)	Connectivity based, event based	N/A	M
SPS Classification	Purpose: To identify the impact and importance of the SPS.	IESO	Drop Down	RAS, NPCC Type 1, NPCC Type 2, NPCC Type 3	N/A	M
Facility Description Document	A document, published by Transmitter, describing with details the functioning and operation of SPS.	IESO	PDF (Upload document)	N/A	N/A	M
Outage Reporting Required Flag	Purpose: Indicate whether outages to the equipment must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	M
Outage Criticality Level	Purpose: Criticality Level is used to determine equipment outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the equipment to the IESO for approval. Mandatory if Outage Reporting	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0
	Required Flag = "Y".					
Virtual Flag	Purpose: Indicate whether the equipment is virtual (non-physical).	IESO	Boolean	Y/N	N/A	M

1.7 Control Centre

Market rules define Control Centres for Ontario facilities and for each external control area/Reliability Coordinator (e.g. HQ, MISO, NYISO).

A Control Centre for each external control area/Reliability Coordinator facilitates outage reporting of all facilities beyond the border as a single station that represents the area.

Business Rule: A control centre contact must be a 24x7 facility contact (section) with the same name as the control centre.

Control centre requires the following attributes to support outage management:

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Control Centre Name	Purpose: Unique name used to identify control centre in communications by participant, transmitter or IESO.	Participant	Text	N/A	N/A	M
Sub-region	Purpose: Control centres organized by electrical area for IESO operations purposes.	IESO	Dropdown	Burlington-to-Nanticoke, Greater Ottawa, GTA North, GTA West, Kitchener-Waterloo- Cambridge-Guelph, Metro Toronto, Northwest Ontario, Windsor-Essex, East Lake Superior, GTA East, London Area, Peterborough-to- Kingston, South Georgian Bay and Muskoka, Sudbury and Algoma, Chatham-Lambton-Sarnia, Greater Bruce Area, Niagara, North of Moosonee, North-East of Sudbury, Renfrew, St. Lawrence	N/A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Electrical Zone	Purpose: Control centres are organized by electrical zone for IESO operations purposes.	IESO	Dropdown	Northeast, Northwest, Essa, Toronto, East, Ottawa, South, Southwest, Niagara, Bruce (please use CDMS numbering system and 1 – N/A, 2 – Bruce, etc.)	N/A	M
Mailing Address 1	Control centre address line 1	Participant	Text	N/A	N/A	0
Mailing Address 2	Control centre address line 2	Participant	Text	N/A	N/A	0
Mailing Address 3	Control centre address line 3	Participant	Text	N/A	N/A	0
Mailing Address 4	Control centre address line 4	Participant	Text	N/A	N/A	0
City	City where control centre resides	Participant	Text	N/A	N/A	М
Province	Province where control centre resides	Participant	Dropdown	Default Ontario	N/A	0
Postal Code	Postal code of the control centre	Participant	Applicable code format	Based on Country selected	N/A	0
Country	Country where control centre resides	Participant	Dropdown	Default Canada	N/A	0
Registration status	Purpose: Indicates current registration status.	System and manual IESO	Dropdown	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M

1.8 GIC Bus

GIC bus is presented in the power flow model of the IESO base case. It is different from the bus (equipment within a physical facility) captured in Section 9.3. GIC bus is connected to equipment (e.g. transformer, circuit section), but itself is not a registered equipment.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
GIC Bus Number	Purpose: GIC bus identifier in the IESO base case.	IESO	Integer	150000-174999	N/A	М

1.9 Earth Model

Earth model represents the earth conductivity at a geographical location. A total of 50 earth models are allowed for GIC modelling in the IESO base case.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Earth Model Name	Purpose: Earth model identifier in the IESO base case.	IESO	Text	N/A	N/A	М
Earth Model Scaling Factor	Purpose: Earth model scaling factor used when calculating branch induced electric field for Benchmark GMD event.	IESO	Decimal number	N/A	N/A	M
Earth Model Description	Purpose: Description of the earth model.	IESO	Text	N/A	N/A	М

1.10 Earth Model Layer

In a one-dimensional model of the earth conductivity structure, earth is described as a layered semi-infinite conductor with given conductivity values in each layer. A total of 25 layers are allowed for an earth model in the IESO base case.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Earth Model Layer	Purpose: Resistivity of an earth model	IESO	Decimal	N/A	Ohm-m	M
Resistivity	layer.		number			
Earth Model Layer	Purpose: Thickness of an earth model	IESO	Integer	N/A	Km	M
Thickness	layer.					


2 Generating Unit

Generating unit is a single machine for converting mechanical power into electric power.

Notes:

- 1. The current business rule is that a generating unit can only have one active instance of PV Inverter, Wind Turbine, Synchronous Machine or Induction Unit associated with it. Per the CIM model and for potential future use, the relationship has been modelled as 0..*.
- 2. Based on the current business rule/requirement, operating nomenclature, BES flag and BPS flag are all retained on the generating unit (not the machine type. Future analysis will determine where these identity and communication attributes should reside if multiple machines are needed for a generating unit.
- 3. Given the potential for allowing many machines for a generating unit, the manufacturer, model and nameplate photo reside on themachine type.

View 4a-Generating Unit

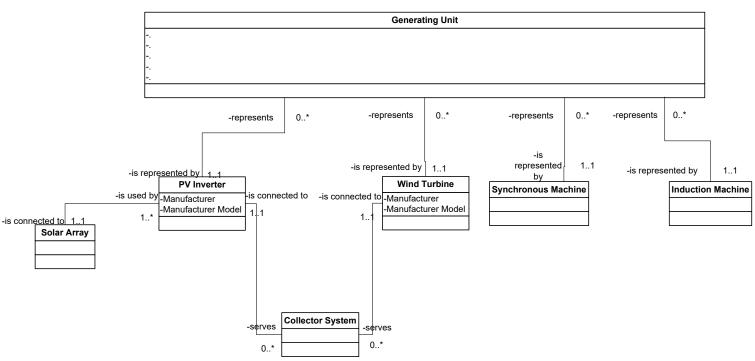

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique operating name used to identify device in communications by participant, transmitter or IESO.	Participant	Free text	N/A	N/A	M
Registration status	Purpose: Indicate current registration status	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered ¹ (system), IESO maintained (system)	N/A	M
NERC-defined Bulk Electric System Flag	Purpose: To indicate if part of the North American Electric Reliability Corporation (NERC) defined Bulk Electric System (BES)	IESO	Boolean	Y/N	N/A	M
NPCC-defined Bulk Power System Flag	Purpose: To indicate if part of the Northeast Power Coordinating Council, Inc. (NPPC) defined Bulk Power System (BPS)	IESO	Boolean	Y/N	N/A	M
Primary Fuel Type	Purpose: The primary fuel used for the generating unit	Participant	Drop down	Bio Fuel, Coal, Gas, Oil, Steam, Uranium, Water, Wind, Solar, Electricity, Other, Demand	N/A	M
Alternate Fuel Type	Purpose: The secondary fuel used for the generating unit	Participant	Drop down	Bio Fuel, Coal, Gas, Oil, Steam, Uranium, Water, Wind, Solar, Electricity, Other, Demand	N/A	0
Rated Speed	Purpose: The speed for which the device has been designed.	Participant	Integer number	0 to 3600	RPM	М

Page **24** of **186**

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Machine Base	Purpose: The MVA base of the machine which impedances are measured at.	Participant	Decimal number	0 to 9999	MVA	М
Rated Voltage	Purpose: The line to line rms value of the alternating voltage for which the device has been designed.	Participant	Decimal number	0 to 9999	kV	M
Rated Active Power	Purpose: Rated active power is the smaller output at either rated ambient conditions (e.g. temperature, head, wind speed, solar radiation) or 90% of rated apparent power. To satisfy steady-state reactive power requirements, active power reductions to rated active power are permitted. Note for wind turbines that have apparent power equal to turbine capability the rated active power of the turbine is equal to the turbine capability.	Participant	Decimal number with validation	0 to 9999	MW	M
Maximum Continuous Active Power (-10 C ambient)	Purpose: Maximum Generator Unit Capability during specified ambient conditions without station service being supplied by the unit. (-10°C ambient).	Participant	Decimal number with validation	0-9999	MW	M
Maximum continuous Active Power (0°C ambient)	Purpose: Maximum Generator Unit Capability during specified ambient conditions without station service being supplied by the unit. (0°C ambient).	Participant	Decimal number with validation	0-9999	MW	M

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Maximum continuous Active Power (winter)	Purpose: Maximum Generator Unit Capability during specified ambient conditions without station service being supplied by the unit. (10°C ambient).	Participant	Decimal number with validation	0-9999	MW	M
Maximum continuous Active Power (20°C ambient)	Purpose : Maximum Generator Unit Capability during specified ambient conditions without station service being supplied by the unit. (20°C ambient).	Participant	Decimal number with validation	0-9999	MW	M
Maximum continuous Active Power (summer)	Purpose: Maximum Generator Unit Capability during specified ambient conditions without station service being supplied by the unit (35°C ambient (at or south of Barrie) or 30°C ambient (north of Barrie)).	Participant	Decimal number with validation	0-9999	MW	M
Maximum Active Power Capability	Purpose: Maximum active power capability under any conditions without station service being supplied by the unit. This value will be used to calculate the energy resource's maximum offer capability.	Participant	Decimal number with validation	0-9999	MW	M
Steam Turbine Duct Firing Capacity	Purpose: Duct firing capacity is the capacity available from the duct firing of a physical steam turbine. For registration purposes, a single value of duct firing capacity will be provided and captured for a steam turbine resource.	Participant	Decimal number with validation	0-999	MW	0

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Minimum Loading Point	Purpose: Minimum active power output that can be produced under stable conditions without ignition support.	Participant	Participant needs to upload supporting documentati on and numeric text	0 to 9999	MW	M
Minimum Active Power Capability (Summer)	Purpose: The minimum output the generating unit must be at without station service being supplied by the unit to ensure it does not become unstable. (35°C ambient (at or south of Barrie) or 30°C ambient (north of Barrie)).	Participant	Decimal number with validation default is 0 MW	0-9999	MW	M
Minimum Active Power Capability (Winter)	Purpose: The minimum output the generating unit must be at without station service being supplied by the unit to ensure it does not become unstable. (10°C ambient).	Participant	Decimal number with validation default is 0 MW	0-9999	MW	М
Maximum Reactive Power (Qmax)at Rated Active Power	Purpose: Maximum amount of reactive power the machine can supply continuously while producing rated active power.	Participant	Decimal number with validation	-0 to 9999	Mvar	M
Minimum Reactive Power (Qmin) at Rated Active Power	Purpose: Minimum amount of reactive power the machine can supply continuously while producing rated active power.	Participant	Decimal number with validation	-9999 to 0	Mvar	M
Maximum Reactive Power (Qmax) at Active Power = 0	Purpose: Maximum amount of reactive power the machine can supply continuously while at zero active power production.	Participant	Decimal number	0 to 9999	Mvar	M

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Minimum Reactive Power (Qmin) at Active Power = 0	Purpose: Minimum amount of reactive power the machine can supply continuously while at zero active power production.	Participant	Decimal number	-9999 to 0	Mvar	M
Maximum Reactive Power (Qmax) at Minimum Loading Point (MLP)	Maximum amount of reactive power the machine can supply continuously while at minimum loading point	Participant	Decimal Number	0 to 9999	Mvar	M
Minimum Reactive Power (Qmin) at Minimum Loading Point (MLP)	Minimum amount of reactive power the machine can supply continuously while at minimum loading point	Participant	Decimal Number	-9999 to 0	Mvar	M
Maximum Voltage limit (Umax)(pu)	Purpose: Maximum terminal voltage that the unit and auxiliaries can continuously operate at. Note: Rated Voltage = 1 pu	Participant	Decimal number with validation	1 to 2	pu	M
Minimum Voltage limit (Umin)(pu)	Purpose: Minimum terminal voltage that the unit and auxiliaries can continuously operate at. Note: Rated Voltage = 1 pu	Participant	Decimal number with validation	0 to 1	pu	M
Rated Power Factor Lagging	Purpose: Power factor that the unit can continuously operate at when at rated ambient conditions.	Participant	Decimal number	0 to 1	PF	М
Rated Power Factor Leading	Purpose: Power factor that the unit can continuously operate at when at rated ambient conditions.	Participant	Decimal number	0 to 1	PF	М
Station Service MW Load for this Unit at Summer MCR (MW)	Purpose: Maximum station service active power load supplied prior to unit synchronizing breaker.	Participant	Decimal number	0 to 9999	MW	M

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Station Service Mvar Load for this Unit at Summer MCR (Mvar)	Purpose: Maximum station service active power load supplied prior to unit synchronizing breaker.	Participant	Decimal number	0 to 9999	Mvar	M
Unit Eligible Energy Limited Generation Unit	Purpose: An energy limited generation unit is unable to deliver energy equal to the resource capacity for each and every hour of the day due to shortage of water or fuel. This declaration indicates whether this generating unit is eligible for limited energy resubmission at the resource level. This is typically only applicable to hydro-electric units and is used to derive the resource's EELR.	Participant	Boolean	Y/N	N/A	M
Voltage Control Point Reference bus	Purpose: Regulated bus Note: This is to determine whether the generator will control the low or the high side of its main output transformer.	Participant	Free text	N/A	N/A	М
Quick Start Flag	Purpose: To determine if the unit should be modelled with its associated breaker closed to ensure it is eligible for 10 minute spinning reserve and be able to be dispatched up in real-time from an open breaker status.	IESO	Boolean	Y/N	N/A	0
Minimum Ramp Rate	Purpose: Lowest ramp rate that the generating unit can reduce/increase at.	Participant	Integer	0-9999	MW/min	0

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Minimum Shutdown Time	Purpose: The minimum number of minutes a generating unit requires between the time the generating unit has shutdown (generating unit breaker opened) to synchronizing to the grid (generating unit breaker closed)	Participant	Integer	0-1000	Minutes	M
Maximum Ramp Rate	Purpose: Maximum ramp rate that the generating unit can reduce/increase at. Will be used to calculate resource maximum offer ramp rate capability.	Participant	Integer	0-9999	MW/min	М
Start Up Time	Purpose: Time associated with the initialization of the start-up process, breaker closing and unit operation up to the minimum loading point.	Participant	Integer	0-500	Minutes	M
Outage Reporting Required Flag	Purpose: Indicate whether outages to the equipment must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	M
Outage Criticality Level	Purpose: Criticality Level is used to determine equipment outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the equipment to the IESO for approval.	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0
	Mandatory if Outage Reporting Required Flag = "Y".					

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Outage Report Public Flag	Purpose: Indicate whether equipment outage information can be viewed publicly. This is used to determine outage information included on public reports. Mandatory when Outage Reporting Required Flag = "Y".	IESO	Boolean	Y/N	N/A	0

2.1 Synchronous Machine

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Manufacturer Name	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	M
Manufacturer Model	Purpose: Refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	M
Equipment Nameplate Photo	Purpose: Electronic photograph of the device nameplate.	Participant	Upload document	PNG, GIF or JPEG file	N/A	М
Synchronous Machine Type	Purpose: Indicate synchronous machine type	Participant	Drop down	Salient Pole/Round Rotor	N/A	М
Armature Resistance (Ra) [equivalent to Positive Sequence Resistance R1]	Purpose: Value at rated voltage and machine base.	Participant	Decimal number with validation	1 ≥ R1 ≥ 0	pu	M

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Negative Sequence Resistance R2	Purpose: Value at rated voltage and machine base.	Participant	Decimal number with validation	1 ≥ R2 ≥ 0	pu	М
Zero Sequence Resistance RO	Purpose: Value at rated voltage and machine base.	Participant	Decimal number with validation	1 ≥ R0 ≥ 0	pu	M
Synchronous Reactance [equivalent to positive sequence reactance X1]	Purpose: Value at rated voltage and machine base.	Participant	Decimal number with validation	1 ≥ X1 ≥ 0	pu	M
Negative Sequence Reactance X2	Purpose: Value at rated voltage and machine base.	Participant	Decimal number with validation	1 ≥ X2 ≥ 0	pu	М
Zero Sequence Reactance X0	Purpose: Value at rated voltage and machine base.	Participant	Decimal number with validation	1 ≥ X0 ≥ 0	pu	М
Field Resistance (Rfd)	Purpose: Resistance of the field winding at operating temperature, 75°C for hydraulic, 100°C for thermal.	Participant	Decimal number with validation	≥0	Ohms	М
Base Field Current	Purpose: The intersection of the airgap line and rated terminal voltage at rated speed and open circuit.	Participant	Decimal number with validation	N/A	А	М
Base Field Voltage	Purpose: Field winding voltage when operating at base field current and field resistance.	Participant	Decimal number with validation	N/A	V	М
Open Circuit Saturation Curve	Purpose: A figure showing the characteristic of the open-circuit stator terminal voltage as a function of field current at rated speed.	Participant	Upload document	N/A	N/A	M
Short Circuit Curve	Purpose: A figure showing the characteristic of the short-circuit stator terminal voltage as a function of field current at rated speed.	Participant	Upload document	N/A	N/A	0

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
V Curve	Purpose: A figure showing the relation of armature current as a function of field current.	Participant	Upload document	N/A	N/A	0
Capability Curve	Purpose: A figure showing generator capability, equipment limitations and protective functions if operated at rated voltage.	Participant	Upload document	N/A	N/A	M

2.2 Induction Machine

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Manufacturer Name	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	M
Manufacturer Model	Purpose: refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	M
Equipment Nameplate Photo	Purpose: Electronic photograph of the device nameplate	Participant	Upload document	PNG, GIF or JPEG file	N/A	M
Rated Torque	Purpose : Torque required to produce the rated power of the electrical machine at full-load speed.	Participant	Real	0-9999	pu	M
Rated Slip	Purpose : The difference between the synchronous speed of the magnetic field, and the shaft rotating speed	Participant	Real	0-9999	pu	M

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Starting Torque	Purpose : The rated machine torque capability during start at rated voltage and frequency.	Participant	Real	0-9999	pu	M
Starting Current	Purpose: The current required by the machine during the starting process to accelerate the machine and load to operating speed. Maximum starting current at rated voltage is drawn at the time of energizing. Expressed in pu of rated current.	Participant	Real	0-9999	pu	M
Starting Power Factor	Purpose : The power factor of the machine during the starting process at rated voltage and frequency.	Participant	Real	-1 to 1	pu	M
Pullout Torque	Purpose: The maximum torque a machine will carry without an abrupt drop in speed	Participant	Real	0-9999	pu	M
Locked Rotor Current	Purpose: The steady-state machine current with the rotor locked, when supplied from a source at rated voltage and frequency. Expressed in pu of rated current.	Participant	Real	0-9999	pu	M

2.3 Wind Turbine

Note: GPS coordinates reside on the facility meteorological coverage map.

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Manufacturer	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	M
Manufacturer Model	Purpose: refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	M
Equipment Nameplate Photo	Purpose: Electronic photograph of the device nameplate. Note for wind turbines it is acceptable to upload one nameplate photo to represent all turbines that have the same data except for serial number.	Participant	Upload document	PNG, GIF or JPEG file	N/A	M
Wind Turbine Generator Type	Purpose: To determine the type of wind turbine.	Participant	Drop Down	Type 1 – Induction; Type 2 – Induction with variable rotor resistance; Type 3 – Doubly-Fed Induction; Type 4 – Full size Converter	N/A	M
Capability Curve	Purpose: A figure showing generator capability, equipment limitations and protective functions if operated at rated voltage.	Participant	Upload document	N/A	N/A	M
Power Curve	Purpose: A figure showing generator active power output vs. wind speed.	Participant	Upload document	N/A	N/A	М

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Cut In Speed (technical limitations of turbines)	Purpose: The value expressed in m/s that indicates when the wind turbine would begin generating (cut in) (minimum amount of wind speed needed).	Participant	Integer	0-999	m/s	M
Cut Out Speed (technical limitations of turbines)	Purpose: Continuous Wind speed at which wind turbines will be shut down to avoid damage	Participant	Integer	0-999	m/s	M
Cut Out Maximum Temperature(technica I limitations of turbines)	Purpose: The value expressed in °C indicates the high-temperature cut out of the wind turbine generator	Participant	Integer		°C	M
Cut Out Minimum Temperature (technical limitations of turbines)	Purpose: The value expressed in °C indicates the low-temperature cut out of the wind turbine generator	Participant	Integer		°C	M
Generator Padmount Transformer Voltage Ratio	Purpose: High-voltage / low-voltage [kV/kV] e.g. for a 34.5kV HV and 0.690kV LV enter 34.5/0.690.	Participant	Ratio of Decimal number/deci mal number	0-9999.99/0-9999.99	kV/kV	M
Generator Padmount Transformer nameplate rating	Purpose: The maximum continuous loading of the transformer.	Participant	Decimal number	0-9999	MVA	M
Generator Padmount Transformer Impedance R	Purpose: Positive sequence impedance at nameplate rating & rated voltage.	Participant	Decimal number	0-1	pu	M
Generator Padmount Transformer Impedance X	Purpose: Positive sequence impedance specified at nameplate rating & rated voltage.	Participant	Decimal number	0-1	pu	M

2.3.1 Solar Generation Devices

2.4 PV Inverter

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Manufacturer	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	М
Manufacturer Model	Purpose: refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	M
Equipment Nameplate Photo	Purpose: Electronic photograph of the device nameplate	Participant	Upload document	PNG, GIF or JPEG file	N/A	М
Rated Voltage	Purpose: Equipment data	Participant	Decimal number with validation	0 to 9999	kV	М
Id" (Sub- transient/Maximum Short Circuit Current)	Purpose: Sub-transient/maximum short circuit current	Participant	Decimal number with validation Value Range: 1.0~3.0	1.0 to 3.0	N/A	pu
Capability Curve	Purpose: A figure showing maximum reactive power capabilities.	Participant	Upload document	PDF format	N/A	M

2.5 Solar Array

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Equipment Name	Unique name for the equipment within a specified scope (e.g. windings unique within transformer but not within facility)	Solution (no manual override)	Text	Facility- pvInverter.solarArray1	N/A	M
Manufacturer	The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	M
Manufacturer Model	Refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	M
Equipment Nameplate Photo	Electronic photograph of the device nameplate	Participant	Upload document	PNG, GIF or JPEG file	N/A	М
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Array Latitude	Physical location (GPS coordinates) of each solar array (North) The physical location should be representative of the GPS coordinates at the centre of each solar array such that every solar panel within that array is within 5km of the GPS coordinates.	Participant	Numeric Text (North is default) The latitude falls within 40-50 degrees N and the longitude falls within 70- 90degrees W (see above for explanation of negative values, can be ok in some cases)	Example 43°N,23 minutes ,00 seconds Would be entered as 43.38333	Decimal Degrees	M
Array Longitude	Physical location (GPS coordinates) of each solar array (West). The physical location should be representative of the GPS coordinates at the centre of each solar array such that every solar panel within that array is within 5km of the GPS coordinates.	Participant	Numeric Text (West is default) The latitude falls within 40-50 degrees N and the longitude falls within 70- 90degrees W (see above for explanation of negative values, can be ok in some cases)	Example 79° W,42 minutes, 00 seconds Would be entered as 79.7000	Decimal Degrees	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Height from Ground	Height from ground level of solar array, The height should be the same regardless of the tilt angle of the panels. The height from the ground to the centre of the array should be used for fixed panels or from the ground to the axis of rotation of the panels for facilities with tracking. Typical heights are in the range of 0.8 -1.5 metres.	Participant	Numeric Text	0-600	Meters	M
Tilt Angle - Horizontal Plane	Tilt (angle with horizontal plane) The tilt angle is only required for facilities without tracking, ones with tracking will experience a variable tilt angle. Facilities in Ontario have a typical tilt angle of 30 degrees. Business rule: If they don't have tracking than they must have a tilt angle.	Participant	Numeric Text		Degrees	0

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Azimuth Angle	Azimuth is defined as a horizontal angle measured clockwise from a north base line or meridian. Azimuth has also been more generally defined as a horizontal angle measured clockwise from any fixed reference plane or easily established base direction line. The solar azimuth angle is most often defined as the angle from due north in a clockwise direction. Panels in the northern hemisphere will typically be pointed south (180 degrees).	Participant	Numeric Text		Degrees	M
Nameplate Capacity (kW)	The capacity of each array should be given in kW DC and should be the sum of all solar panels' power ratings in the array.	Participant	Numeric Text		kW	М
	Each panel is rated by its DC output power under standard test conditions, and typically ranges from 100 to 320 watts. Solar Panel manufacturers use what is called Standard Test Conditions (STC). This means they put the solar panels in a flash tester in their factory that has been calibrated to deliver the equivalent of 1000 watts per square meter of sunlight intensity, hold a cell temperature of					

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
	25'C, and assume an air mass of 1.5. This value is given in Watts DC. The conversion from MW DC to MW AC results in a loss of approximately 15%. The nameplate facility rating in AC should equal roughly the sum of the DC ratings before the inverters multiplied by 0.85. Some solar facilities may have installed panels totaling more than their facility nameplate rating to increase the output when the sun is not at maximum, however the inverters will limit the output to not exceed the facility nameplate rating.					
Mounting Type	Purpose: To determine how the array is mounted. The mounting type could be either ground or roof. Larger facilities are typically ground mounted due to space requirements.	Participant	Dropdown Reported mounting type is roof and facility is > 5 MW question result.	Ground, roof, not mounted	N/A	M
Tracking	Purpose : To determine how the solar array track.	Participant	Dropdown	Single axis, dual axis, none)	N/A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Wind Protection	Purpose: Facilities that have tracking systems can also have wind protection that will level out the panels horizontal to the ground to protect them from excessive winds. The wind speed at which this is done will depend on the facility.	by Participant	Yes/No and if yes Numeric Text Wind protection is reported as No, or wind protection is reported as Yes with the speed at which wind	value Kange	measurement Yes/No	M
			protection will activate and tracking is Yes			

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Module Type	Purpose: The most prevalent material	Participant	Dropdown	Crystalline, Thin-Film	N/A	М
	for solar cells is crystalline silicon.					
	These are efficient but more					
	expensive. Thin-film technologies					
	reduce the amount of material					
	required; most thin film solar cells are					
	sandwiched between two panes of					
	glass to make a module. Since silicon					
	solar panels only use one pane of					
	glass, thin film panels are					
	approximately twice as heavy as					
	crystalline silicon panels.					
	Concentrated photovoltaic (CPV)					
	technology uses optics such as lenses					
	or curved mirrors to concentrate a					
	large amount of sunlight onto a small					
	area.					

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Temperature Coefficient	Purpose: The solar panel temperature affects the maximum power output directly, the warmer the solar panel the less power it can produce. Typically, at the maximum power point solar panels will have a temperature coefficient in the –0.2% to -0.5% range (thin film is around -0.2%, crystalline is around -0.5%). The temperature coefficient measures the efficiency of the panel at temperatures higher than 25 degrees. With a coefficient of -0.48%, for each degree over 25°C the maximum power of the panel is reduced by		Reported temperature coefficient is within expected range (-0.2%0.5%)	Value Range		M/O
	0.48%.					

2.6 Collector System

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique operating name used to identify device in communications by participant, transmitter or IESO.	Participant	Free text	N/A	N/A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Collector System Name	Purpose: Name of collector system	Participant	Free text	C1, C2, C3, C4 C10	N/A	M
Total Active Power per Collector System	Purpose: Sum of all power inverters related to it	System			MW	М
Rated Voltage	Purpose: The line to line rms value of the alternating voltage for which the device has been designed.	Participant	Decimal number with validation	0-1000	kV	M
Equivalent Positive- Sequence Resistance R1 at rated voltage and 100 MVA (pu)	Purpose: Circuit Parameters	Participant	Decimal number with validation	0-1	pu	M
Equivalent Positive- Sequence Reactance X1 at rated voltage and 100 MVA (pu)	Purpose: Circuit Parameters	Participant	Decimal number with validation	0-1	pu	M
Equivalent Positive- Sequence Susceptance B1 at rated voltage and 100 MVA (pu)	Purpose: Circuit Parameters	Participant	Decimal number with validation	0-1	pu	M
Equivalent Zero- Sequence Resistance R0 at rated voltage and 100 MVA (pu)	Purpose: Circuit Parameters	Participant	Decimal number with validation	0-1	pu	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Equivalent Zero- Sequence Reactance XO at rated voltage and 100 MVA (pu)	Purpose: Circuit Parameters	Participant	Decimal number with validation	0-1	pu	М
Equivalent Zero- Sequence Susceptance B0 at rated voltage and 100 MVA (pu)	Purpose: Circuit Parameters	Participant	Decimal number with validation	0-1	pu	М

3 Load

Virtual load equipment associated to a DR resource requires only EMS equipment id and Registration status.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique operating name used to identify device in communications by participant, transmitter or IESO.	Participant	Text		N/A	M
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	0
NPCC-defined Bulk Power System Flag	Purpose: Does this equipment meet the "Bulk Power System" (BPS) definition of electrical components?	IESO	Boolean	Y/N	N/A	0
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO Maintained	N/A	М


Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Peak Season	Purpose: The season in which the peak station load occurs.	Participant	Drop down	Summer, Winter	N/A	0
	DR Not required for virtual load since not used by DR resource					
Total peak load - Active Power	Purpose: For UFLS and power system modeling.	Participant	Real	0 to 999	MW	0
	DR Not required for virtual load since DR resource will use capability from commitment period					
Total peak load - Reactive Power	Purpose: For power system modeling. DR Not required for virtual load since not used by DR resource	Participant	Real	-999 to 999	Mvar	0
Maximum Registered Ramp Rate	Purpose: Maximum ramp rate that the load can reduce/increase at. Will be used to calculate load resource capability.	Participant	Integer	0-9999	MW/min	M
Requirement for Dual Supply	Purpose: To identify situations where a single supply is not capable of supplying all load due to bus, transformer or other limitations.	Participant	Boolean	Y/N	N/A	0

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Unusual consequences of power outages Description Document	Purpose: Document describing particular loads which have negative or unusual consequences when subjected to power outages.	Participant	Upload document	N/A	N/A	O
Unusual sensitivity to voltage or frequency fluctuation Description Document	Purpose: Document describing particular loads which have negative or unusual consequences to voltage or frequency fluctuations.	Participant	Upload document	N/A	N/A	0
Induction motor rated between 500 and 13,500 HP	Purpose: The total capacity of Induction motors rated between 500 and 13,500 HP that are associated with the load. Rationale: provides ability to confirm participant's intentions with the equipment registered.	Computed Values–not recorded attributes	Real	0 to 999	MW	0
Induction motor rated higher 13,500 HP	Purpose: The total capacity of Induction motors rated higher than 13,500 HP that are associated with the load. Rationale: provides ability to confirm participant's intentions with the equipment registered.	Computed Values–not recorded attributes	Real	0 to 999	MW	0
Synchronous motor rated between 500 and 13,500 HP	Purpose: The total capacity of Synchronous motors rated between 500 and 13,500 HP that are associated with the load. Rationale: provides ability to confirm participant's intentions with the equipment registered.	Computed Values–not recorded attributes	Real	0 to 999	MW	0

LST-48 Register Facility Help File v8.0.docx

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Synchronous	Purpose: The total capacity of	Computed	Real	0 to 999	MW	0
motor rated	Synchronous motors rated higher than	Values–not				
higher 13,500 HP	13,500 HP that are associated with the	recorded				
	load. Rationale: provides ability to	attributes				
	confirm participant's intentions with the equipment registered.					
Remaining Load	Purpose: To determine the remaining	Participant	Real	0 to 999	MW	0
other than large	load other than large motors.					
motors						
Industrial load	Purpose: The amount of station loading	Participant	Real	0-999	MW	0
	which is comprised of industrial load.					_
Commercial load	Purpose: The amount of station loading which is comprised of commercial load.	Participant	Real	0-999	MW	0
Residential load	Purpose: The amount of station loading which is comprised of residential load.	Participant	Real	0-999	MW	0
Variable speed drives)	Purpose: The amount of industrial variable speed drives load.	Participant	Real	0-999	MW	0
Welding equipment	Purpose: The amount of industrial welding equipment load.	Participant	Real	0-999	MW	0
Static converters	Purpose: The amount of industrial static converter load.	Participant	Real	0-999	MW	0
Furnace	Purpose: The amount of industrial furnace load.	Participant	Real	0-999	MW	0

3.1 Induction Motor (≥ 500 HP)

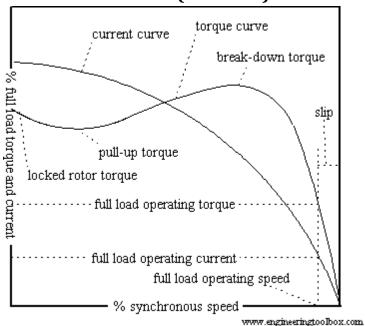

Submitted Unit of M/O **Attribute** Definition **Data Type Value Range** by measurement **Purpose:** Unique name for the N/A **Equipment Name** Solution Text E.g. inductionMotor1 Μ equipment within a specified scope (no manual (e.g. windings unique within override) transformer but not within facility **Purpose:** The manufacturer is any N/A N/A Participant Manufacturer Text Μ natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Manufacturer Model	Purpose: Refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Text	N/A	N/A	M
Equipment Nameplate Photo	Purpose: Electronic photograph of the device nameplate. Note for wind turbines it is acceptable to upload one nameplate photo to represent all turbines that have the same data except for serial number.	Participant	Upload document	PNG, PDF, GIF or JPEG file	N/A	M
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Rated Voltage	Purpose: The line to line rms value of the alternating voltage for which the device has been designed.	Participant	Real	0-9999	kV	М
Rated Capability	Purpose: Rated Machine power.	Participant	Real		MW	М
Rated Speed	Purpose: Full load Speed of the Motor	Participant	Real	0-9999	rpm	М
Rated Power Factor	Purpose: Motor Power Factor at rated voltage and rated load.	Participant	Real	-1 to 1	pu	М
Starting Method	Purpose: Method in which the motor will be started.	Participant	Text	Full-voltage, Resistive, Reduced Voltage, Delta- wye	N/A	0
Number of Starts per Day	Purpose: Expected number of motor starts per day.	Participant	Integer	0-100	N/A	0

3.2 Large Induction Motor (≥ 13,500 HP)

Business rule: These additional attributes need to be provided if Type = Induction and Rated Capability = 13500 HP or more in 'Motor' entity

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Rated Torque	Purpose: Torque required to produce the rated power of the electrical motor at full-load speed.	Participant	Real	0-9999	pu	M
Rated Slip	Purpose: The difference between the synchronous speed of the magnetic field, and the shaft rotating speed.	Participant	Real	0-9999	pu	M
Starting Torque	Purpose: The rated motor torque capability during start at rated voltage and frequency.	Participant	Real	0-9999	pu	M
Starting Current	Purpose: The current required by the motor during the starting process to accelerate the motor and load to operating speed. Maximum starting current at rated voltage is drawn at the time of energizing. Expressed in pu of rated current.	Participant	Real	0-9999	pu	M
Starting Power Factor	Purpose: The power factor of the motor during the starting process at rated voltage and frequency.	Participant	Real	-1 to 1	pu	M
Pullout Torque	Purpose: The maximum torque a motor will carry without an abrupt drop in speed.	Participant	Real	0-9999	pu	M
Locked rotor current	Purpose: The steady-state motor current with the rotor locked, when supplied from a source at rated voltage and frequency. Expressed in pu of rated current.	Participant	Real	0-9999	pu	M

3.3 Synchronous Motor (≥ 500 HP)

Business rule: Needs to be provided if Type = Synchronous and Rated Capability = 500 HP or more but less than 5000 HP in 'Motor' entity

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Equipment Name Solution (no manual override)	Purpose: Unique name for the equipment within a specified scope (e.g. windings unique within transformer but not within facility).	Solution (no manual override)	Text	E.g. synchronousMotor1	N/A	М
Manufacturer	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Text	N/A	N/A	M
Manufacturer Model	Purpose: refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Text	N/A	N/A	M
Equipment Nameplate Photo	Purpose: Electronic photograph of the device nameplate. Note for wind turbines it is acceptable to upload one nameplate photo to represent all turbines that have the same data except for serial number.	Participant	Upload document	PNG, PDF, GIF or JPEG file		M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	М
Rated Voltage	The line to line rms value of the alternating voltage for which the device has been designed.	Participant	Real	0-9999	kV	М
Rated Capability	Rated Machine power.	Participant	Real	0-9999	MVA	М
Rated Power Factor	Motor Power Factor at rate voltage and rated load.	Participant	Real	-1 to 1		М
Starting Method	Purpose: Method in which the motor will be started.	Participant	Text	Full-voltage, Resistive, Reduced Voltage, Delta- wye	N/A	0
Number of Starts per Day	Purpose: Expected number of motor starts per day.	Participant	Integer	0-100	N/A	0

3.4 Large Synchronous Motor (≥ 13500 HP)

Business rule: These additional attributes need to be provided if Type = Synchronous and Rated Capability = 13500 HP or more in 'Motor' entity

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Armature resistance (Ra) (pu based on machine base)	Positive Sequence Resistance	Participant	Real	0-100	per unit	M

4 **Dynamic Model**

Dynamic models represent the electrical and mechanical behaviour of equipment during transients and transitions from one steady state to another. Dynamic models are specified for different types of equipment (e.g. generating unit, STATCOM, SVC, motor). Dynamic models are not equipment.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Dynamic Model Id	Purpose : System derived numeric code based on the Dynamic model instance.	System	Integer	N/A	N/A	M
Bus Number	Purpose: Load flow program bus number of the equipment for which the dynamic model is associated with.	IESO	Integer	6 digit Integer	N/A	M
Bus Name	Purpose: Load flow program bus name of the equipment for which the dynamic model is associated with.	IESO	Free text	Limited to twelve characters	N/A	M
Machine Id	Purpose : Load flow program device id of the equipment for which the dynamic model is associated with.	IESO	Free text	Limited to two characters	N/A	М
Comments	Purpose : Comments provided by the participant to describe the user defined model.	Participant	Free text	N/A	N/A	0
Block Diagram Document	Purpose: A file which shows the user defined model structure in block diagram format complete with input(s), output(s), states, vars, cons, and icons.	Participant	Upload document	N/A	N/A	0
	Mandatory if UDM is selected.					
Source Code Document	Purpose: A Fortran document which has the source code which will describe the dynamic behaviour of the equipment.	Participant	Upload document	N/A	N/A	0
	Mandatory if UDM is selected.					

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Model Scope	Purpose: The equipment this model is associated with. Mandatory for all dynamic models. Collector and Facility values are only applicable to wind turbines and PV Inverters. All other equipment use 'unit'. Example does this represent one turbine, one collector's worth of turbines, or a whole facilities worth of turbines? This is derived based on the associated equipment type.	System Participant (wind turbine only)	Drop down	Unit, Collector or Facility	N/A	M

4.1 Technology Type

2. Synchronous machine

4. PV Inverter

3. Wind Turbine Generator

38. Induction machine

22. SVC

23. STATCOM

8. Induction Motor

10. Synchronous Motor

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Technology Type Id	Purpose : System derived numeric code based on the Technology type instance.	System	Integer	N/A	N/A	M
Technology Type Name	Purpose: System derived name based on the type of equipment the dynamic model is associated with.	System	Drop Down	Synchronous Machine PV Inverter Wind Turbine Generator Induction machine SVC STATCOM Induction Motor Synchronous Motor	N/A	M

4.2 Dynamic Model Type

Generator
Comp [Compensator]
Exciter [Excitation System]
Stabilizer
Governor [Turbine-Governor]

Electrical Mechanical Pitch Control
Aerodynamic
10.Auxiliary Control
11.SVC
12.STATCOM
13.Machine

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Dynamic Model Type Id	Purpose : System derived numeric code based on the Dynamic model type instance.	System	Integer	N/A	N/A	M
Dynamic Model Type Name	Purpose: Specify the type of system the dynamic model represents within the technology type. E.g. a synchronous generator can have a dynamic model which represents the generator, compensator, excitation system, stabilizer, or the turbine-governor. The available choices are filtered based on technology type.	Participant	Drop Down	Generator Compensator Excitation System Stabilizer Turbine-Governor Electrical Mechanical Pitch Control Aerodynamic Auxiliary Control SVC STATCOM Machine	N/A	M

4.3 Dynamic Model Name

The name for one or more models. The model name can be shared among different model types and technology types.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Dynamic Model Name Id	Purpose : System derived numeric code based on the Dynamic model name instance.	System	Integer	N/A	N/A	M
Dynamic Model Name	Purpose: Model short name which is used by dynamic simulation software (PSS/E)	Participant	Free Text	Limited to six characters	N/A	М
Dynamic Model Description	Purpose: Model description, i.e. Model Long Name	Participant	Free Text	N/A	N/A	М
User Defined Model Flag	Purpose: y –user defined / n-standard	Participant	Boolean	Y/N	N/A	М

4.4 Dynamic Model Parameter

A parameter defined for exactly one model name.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	м/о
Dynamic Model Parameter Id	Purpose: System derived numeric code based on the Dynamic model Parameter instance	System	Integer	N/A	N/A	М
Dynamic Model Parameter Type	Purpose: An identifier which specifies the type of each parameter.	Participant	Drop Down	ICON,CON,STATE,VAR	N/A	М

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Dynamic Model Parameter Name	Purpose: A unique name which describes each of the ICONS and CONS associated with the standard model. A unique name which describes each of the ICONS, CONS, STATES, and VARS associated with the user defined model. Parameters will need to be entered in the same order in which the source code allocates their location.	For Participant	Free Text	N/A	N/A	M
Dynamic Model Parameter Order	Purpose: The order in which the dynamic model parameters are stored and used by dynamic simulation software. For user defined models the parameters will need to be entered in the same order in which the source code allocates their location. For the IESO database the ICONS must be first then CONS, then STATES and Finally Vars.	System	Integer	>=1	N/A	M

4.5 Dynamic Model Parameter Value


Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Dynamic Model	Purpose: System derived numeric	System	Integer	N/A	N/A	М
Parameter Id	code based on the Dynamic model					
	Parameter instance					

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Dynamic Model Parameter value	Purpose : The value associated with the specified parameter.	Participant	Decimal number for CONS,	N/A	N/A	0
	Mandatory for ICONS and CONS. ICONS are Text and CONS are decimal numbers		text for ICONS			
	Prohibited for STATES AND VARS					

5 **Transformer**

Power transformer entity is related to other entities as follows:

View 4d-Transformer

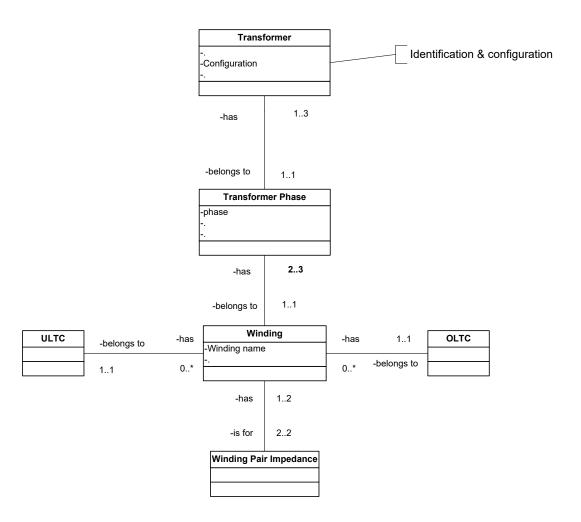

The following types of transformers will not be required to be registered:

- o Grounding transformers
- o Excitation transformers
- o Station Service transformers with all windings less than 100kV and are not part of a generating facility.
 - o Eg: Load facility SS transformers which are connected to the LV bus.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique operating name used to identify device in communications by participant, transmitter or IESO.	Participant	Free Text	N/A	N/A	M
Manufacturer	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	M
Manufacturer Model	Purpose: Refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	0
Equipment Nameplate Photo	Purpose: Electronic photograph of the device nameplate	Participant	Upload document	PNG, PDF, GIF or JPEG file	N/A	М
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	M
NPCC-defined Bulk Power System Flag	Purpose: Does this equipment meet the "Bulk Power System" (BPS) definition of electrical components?	IESO	Boolean	Y/N	N/A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Registration status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Туре	Purpose: The purpose of this transformer.	Participant	Drop Down	Step up, Step down, auto, regulation, phase shifter	N/A	M
Configuration	Purpose: Define if the transformer is three single phase units or one three phase unit.	Participant	Drop Down	Three Phase, Single Phase	N/A	M
Outage Reporting Required Flag	Purpose: Indicate whether outages to the equipment must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	М
Outage Criticality Level	Purpose: Criticality Level is used to determine equipment outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the equipment to the IESO for approval. Mandatory if Outage Reporting Required Flag = "Y".	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0
Virtual Flag	Purpose: Indicate whether the equipment is virtual (non-physical).	IESO	Boolean	Y/N	N/A	М
СКТ	Purpose: Transformer identifier in the IESO base case.	Participant	Text	N/A	N/A	М
Vector Group	Purpose: Transformer vector group based on transformer winding connections and phase angles.	Participant	Dropdown	N/A	N/A	М

LST-48 Register Facility Help File v8.0.docx

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Core	Purpose: Number of cores in transformer core design.	Participant	Integer	-1 for three phase shell form 0 for unknown core design 1 for single core design 3 for three phase 3-legged core form 5 for three phase 5-legged core form	N/A	М
				7 for three phase 7-lagged core form		
T Model	Purpose: Transformer model in GIC DC Network.	Participant	Integer	0 for two/three/auto transformer model as defined by its vector group 1 for transformer as T model in DC network	N/A	0
K Factor	Purpose: A factor to calculate transformer reactive power loss from GIC flowing its winding.	Participant	Decimal number	0.33 if GIC Core = -1 0.0 if GIC Core = 0 1.18 if GIC Core = 1 0.29 if GIC Core = 3 0.66 if GIC Core = 5 0.66 if GIC Core = 7	MVAR/AMP	M
GIC Comment	Purpose: Participant supplied comments.	Participant	Text	N/A	N/A	0

5.1 Transformer Phase

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Equipment Name	Purpose: Unique name for the equipment within a specified scope (e.g. windings unique within transformer but not within facility)	Solution (no manual override)	Text	E.g. LEASIDE-230.T21.RedPhas e	N/A	M
Phase	Purpose: Identifies one of three single phase units that are combined as an operational transformer or is 'Three' if configuration is set to 'three phase'	Participant	Drop Down	Red, White, Blue, Three Phase	N/A	М
Number of Windings	Purpose: Define the number of windings on the transformer, either two or three windings. Row/page intentionally left blank	Participant	Drop Down	2,3	N/A	M

LST-48 Register Facility Help File v8.0.docx

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Cooling Type 1	Purpose: Method of first stage of cooling.	Participant	Drop Down	ONAN ² ONAF OFAF ODAF ODAN OFAN OFWF ANN AFN	N/A	M
Name Plate Rating for Cooling Type 1	Purpose: The name plate MVA rating associated with stage 1 cooling on.	Participant	Decimal number with validation	0-9999	MVA	M

Table 1 – Cooling Class Letter Description

		Letter	Description
Internal	First Letter	0	Liquid with flash point less than or equal to 300°C
	(Cooling medium)	K	Liquid with flash point greater than 300°C
		L	Liquid with no measurable flash point
	Second Letter (Cooling mechanism)	N	Natural convection through cooling equipment and windings
		F	Forced circulation through cooling equipment, natural convection in windings
		D	Forced circulation through cooling equipment, directed flow in man windings
External	Third letter	Α	Air
	(Cooling medium)	W	Water
	Fourth letter (Cooling medium)	N	Natural convection
		F	Forced circulation

² A participant may be able to select the same cooling type. I.e. they may select cooling type 1 – ONAN, cooling type 2 ONAF, cooling type 3 ONAF.

LST-48 Register Facility Help File v8.0.docx

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Cooling Type 2 - ONAF	Purpose: Method of second stage of cooling.	Participant	Drop Down	ONAN ONAF OFAF ODAF ODAN OFAN OFWF ANN AFN	N/A	M
Name Plate Rating for Cooling Type 2	Purpose: The name plate MVA rating associated with stage 2 cooling on.	Participant	Decimal number with validation	0-9999	MVA	M
Cooling Type 3 - OFAF	Purpose: Method of third stage of cooling.	Participant	Drop Down	ONAN ONAF OFAF ODAF ODAN OFAN OFWF ANN AFN	N/A	M
Name Plate Rating for Cooling Type 3	Purpose: The name plate MVA rating associated with stage 3 cooling on.	Participant	Decimal number with validation	0-9999	MVA	M
Continuous Summer Rating	Purpose: The maximum constant load that can be carried continuously without exceeding established temperature rise limitations. Ambient Temp= 35°C South of Barrie, 30°C north.	Participant	Decimal number with validation	0-9999	MVA	M

LST-48 Register Facility Help File v8.0.docx

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
10 Day Summer Thermal Rating	Purpose: The maximum constant load that can be carried for the specified time without exceeding established temperature rise limits. Ambient Temp= 35°C South of Barrie, 30°C north	Participant	Decimal number with validation	0-9999	MVA	M
15 Minute Summer Thermal Rating	Purpose: The maximum constant load that can be carried for the specified time without exceeding established temperature rise limits. Ambient Temp= 35°C South of Barrie, 30°C north.	Participant	Decimal number with validation	0-9999	MVA	M
Continuous Winter Rating	Purpose: The maximum constant load that can be carried continuously without exceeding established temperature rise limitations. Ambient Temp: 10°C.	Participant	Decimal number with validation	0-9999	MVA	M
10 Day Winter Thermal Rating	Purpose: The maximum constant load that can be carried for the specified time without exceeding established temperature rise limits. Ambient Temp: 10°C.	Participant	Decimal number with validation	0-9999	MVA	M
15 Minute Winter Thermal Rating	Purpose: The maximum constant load that can be carried for the specified time without exceeding established temperature rise limits. Ambient Temp: 10°C.	Participant	Decimal number with validation	0-9999	MVA	M

Note: Transformer Three Phase Configuration does not have any unique attributes so there is no table

5.2 Winding

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Equipment name	Purpose: Unique name for the equipment within a specified scope (e.g. windings unique within transformer but not within facility)	Solution (no manual override)	Text	Facility.parent.[parent].e quipment. E.g. FACILITY-230.T21.hWinding	N/A	M
Winding Connection	Purpose: Method in which the three winding phases are connected to the power system.	Participant	Drop down	Delta Buried Delta Wye Zigzag	N/A	M
Grounding Method	Purpose: Method in which the neutral terminal is connected to ground.	Participant	Drop down	Ungrounded Solidly Grounded Shunt Grounded	N/A	М
Grounding Impedance Resistive	Purpose: The resistive impedance value between the neutral terminal and ground.	Participant	Decimal number with validation	0-9999, Disabled on form and 'null' if 'grounding method' is ungrounded	ohm	M
Grounding Impedance Inductive	Purpose: The inductive impedance value between the neutral terminal and ground.	Participant	Decimal number with validation	0-9999, Disabled on form and 'null' if 'grounding method' is ungrounded	ohm	M
Rated Winding Voltage	Purpose: The voltage at which winding operating and performance characteristics are referred.	Participant	Decimal number with validation	0-1000	kV	М
Winding Type	Purpose: Winding type for two- and three-winding transformers.	Participant	Dropdown	Primary, secondary, tertiary	N/A	М
DC Winding Resistance	Purpose: DC resistance of a winding.	Participant	Decimal number	≥0	Ohms/phase	М
Ground DC Winding Resistance	Purpose: Grounding DC resistance of a winding.	Participant	Decimal number	≥0	Ohms	М

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Blocking Device	Purpose: Indicator of the presence of a neutral blocking device installed in the neutral path of a transformer.	Participant	Integer	0 indicates non GIC blocking device present 1 indicates GIC blocking device present	N/A	М

5.3 ULTC

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique operating name used to identify device in communications by participant, transmitter or IESO.	Participant	Free text	N/A	N/A	M
Minimum Tap Position	Purpose: The lowest kV value of the transformer ULTC selector switch device.	Participant	Decimal number with validation	0-9999 Validation: must be less than 'Max Tap Position'.	kV	М
Maximum Tap Position	Purpose: The highest kV value of the transformer ULTC selector switch device.	Participant	Decimal number with validation	0 to 9999, Greater than the previous row	kV	М
Number of Steps	Purpose: The number of under load tap changer positions not including neutral tap switchover positions (I.E. 17a and 17c for a 33 tap position ULTC). Example if a transformer has 16 raise and 16 lower plus three neutral positions then number of steps is 33.	Participant	Integer	1-100	N/A	M
Voltage Control Point	Purpose: Bus at which tap changer logic is controlling within a bandwidth.	Participant	Drop Down	H, X, Y, Remote, No Regulation	N/A	М

5.<u>4 OLTC</u>

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique operating name used to identify device in communications by participant, transmitter or IESO.	Participant	Free text	N/A	N/A	M
Position 1	Purpose: The kV value of the transformer winding OLTC selector switch device which represents tap 1. If tap does not exist value =0.	Participant	decimal number with validation	0-1000	kV	M
Position 2	Purpose: The kV value of the transformer winding OLTC selector switch device which represents tap 2. If tap does not exist value =0.	Participant	Decimal number with validation	0-1000	kV	0
Position 3	Purpose: The kV value of the transformer winding OLTC selector switch device which represents tap 3. If tap does not exist value =0.	Participant	Decimal number with validation	0-1000	kV	0
Position 4	Purpose: The kV value of the transformer winding OLTC selector switch device which represents tap 4. If tap does not exist value =0.	Participant	Decimal number with validation	0-1000	kV	0
Position 5	Purpose: The kV value of the transformer winding OLTC selector switch device which represents tap 5. If tap does not exist value =0.	Participant	Decimal number with validation	0-1000	kV	0
Position 6	Purpose: The kV value of the transformer winding OLTC selector switch device which represents tap 6. If tap does not exist value =0.	Participant	Decimal number with validation	0-1000	kV	0
Position 7	Purpose: The kV value of the transformer winding OLTC selector switch device which represents tap 7. If tap does not exist value =0.	Participant	Decimal number with validation	0-1000	kV	0

LST-48 Register Facility Help File v8.0.docx

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Position 8	Purpose: The kV value of the transformer winding OLTC selector switch device which represents tap 8. If tap does not exist value =0.	Participant	Decimal number with validation	0-1000	kV	0
Position 9	Purpose: The kV value of the transformer winding OLTC selector switch device which represents tap 9. If tap does not exist value =0.	Participant	Decimal number with validation	0-1000	kV	0
Position 10	Purpose: The kV value of the transformer winding OLTC selector switch device which represents tap 10. If tap does not exist value =0.	Participant	decimal number with validation	0-1000	kV	0
In-Service Position	Tap number which the transformer was left in.	Participant	Integer	1 - 10		M

5.5 Winding Pair Impedance


Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Equipment Name	Purpose: Unique name for the equipment within a specified scope (e.g. windings unique within transformer but not within facility)	Solution (no manual override)	Text	Facility.parent.[parent].e quipment. E.gFACILITY-230.T21.hxImpedance	N/A	M
Positive Sequence Impedance R (pu associated with impedance Base MVA and rated winding voltage)	Purpose: The measured positive sequence resistance between the designated windings.	Participant	Decimal number with validation	0-100	pu	M

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Positive Sequence Impedance X (pu associated with impedance Base MVA and rated winding voltage)	Purpose: The measured positive sequence reactance between the designated windings.	Participant	Decimal number with validation	0-100	pu	M
Positive Sequence Impedance Base (MVA)	Purpose: The MVA base at which the per unit impedance value is measured at.	Participant	Decimal number with validation	0-1000	MVA	M
Status of Tertiary Winding for Zero Sequence Impedance Measurements	Purpose: The status of tertiary/third Winding for Zero Sequence Impedance measurements.	Participant	Drop down	Range: Open, Closed Applicable if 'Number of Windings' = 3		0
Zero Sequence Impedance R (pu associated with impedance Base MVA and rated winding voltage))	Purpose: The measured zero sequence resistance between the designated windings.	Participant	Decimal number with validation	0-100	pu	M
Zero Sequence Impedance X (pu associated with impedance Base MVA and rated winding voltage))	Purpose: The measured zero sequence reactance between the designated terminals.	Participant	Decimal number with validation	0-100	pu	M
Zero Sequence Impedance Base (MVA)	Purpose: The MVA base at which the per unit impedance value is measured at.	Participant	Decimal number with validation	0-1000	MVA	М

6 Circuit

The circuit entity has other entities linked to it as shown below:

Circuit

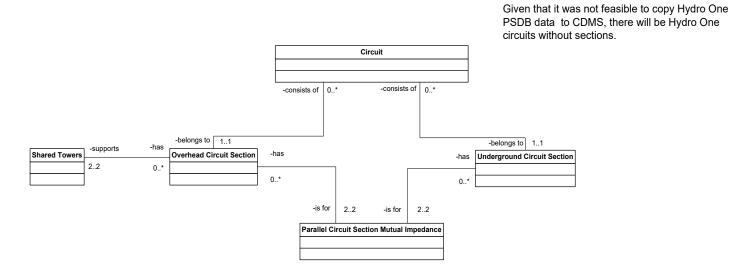

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique operating name used to identify device in communications by participant, transmitter or IESO.	Participant	Free Text	N/A	N/A	M
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	М
Start of Circuit	Purpose: Identify the originating terminal station or junction.	Participant	Free Text	N/A	N/A	M
End of Circuit	Purpose: Identify the ending terminal station or junction.	Participant	Free Text	N/A	N/A	M
Thermal Limit Lookup Data	Purpose : A CSV file that provides multiple thermal ratings for various ambient conditions.	Participant	Upload Document	N/A	N/A	0
Comments		Participant	Free Text	N/A	N/A	0
Outage Reporting Required Flag	Purpose: Indicate whether outages to the equipment must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	М

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Outage Criticality Level	Purpose: Criticality Level is used to determine equipment outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the equipment to the IESO for approval. Mandatory if Outage Reporting Required Flag = "Y".	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0
Virtual Flag	Purpose: Indicate whether the equipment is virtual (non-physical).	IESO	Boolean	Y/N	N/A	М

6.1 Overhead Circuit Section

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique operating name used to identify device in communications by participant, transmitter or IESO.	Participant	Free Text	N/A	N/A	M
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Start of Section	Purpose: Identify the starting junction or terminal to indicate its electrical positioning.	Participant	Free Text	Substation or Junction name	N/A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
End of Section	Purpose: Identify the ending junction or terminal to indicate its electrical positioning.	Participant	Free Text	Substation or Junction name	N/A	M
Section Length	Purpose: Indicate the physical dimensions of the overhead conductor.	Participant	Decimal number	0 to 9999	km	M
Conductor Size	Purpose: The circular mills of the conductor.	Participant	Integer number	0 to 99999	kcml	M
Conductor Stranding	Purpose: description of the number of conducing strands and number of reinforcing strands.	Participant	Integer (allow for special characters)	N/A	N/A	M
Conductor Type	Purpose: Description of the conductor, e.g. ACSR, AAC, ACAR etc.	Participant	Free Text	N/A	N/A	М
Conductors per bundle	Purpose: the number of conductors bundled together per phase.	Participant	Integer	0 to 9999	N/A	M
Rated Voltage	Purpose: line to line voltage at which impedances are calculated	Participant	Integer	0 to 9999	kV	M
Positive Sequence Resistance R1 at Rated Voltage and 100 MVA (PU)	Purpose: Circuit parameters	Participant	Decimal number	0 to 9999	PU	M
Positive Sequence Reactance X1 at Rated Voltage and 100 MVA (PU)	Purpose: Circuit parameters	Participant	Decimal number	0 to 9999	PU	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Positive Sequence Susceptance B1 at Rated Voltage and 100 MVA (PU)	Purpose: Circuit parameters	Participant	Decimal number	0 to 9999	PU	M
Zero Sequence Resistance Ro at Rated Voltage and 100 MVA (PU)	Purpose: Circuit parameters	Participant	Decimal number	0 to 9999	PU	M
Zero Sequence Reactance Xo at Rated Voltage and 100 MVA (PU)	Purpose: Circuit parameters	Participant	Decimal number	0 to 9999	PU	М
Zero Sequence Susceptance Bo at Rated Voltage and 100 MVA (PU)	Purpose: Circuit parameters	Participant	Decimal number	0 to 9999	PU	М
Wind Speed for Rating	Purpose: Wind speed used to derive circuit loading ratings.	Participant	Integer	Default = 4 Range: 0 to 4 km/hr	km/h	М
Summer Ambient Temperature for Rating (X°C)	Purpose: Ambient temperature used to derive circuit loading ratings. Summer Ambient temperature is based on location.	Participant	Integer	Default = 35°C south of Barrie Default = 30°C north of Barrie Range: 0 to 500	°C	M

LST-48 Register Facility Help File v8.0.docx

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Ratin	gs					
Winter (10°C ambient) Continuous Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	0 to 9999	А	М
Conductor Temperature for Winter Continuous Rating (°C)	Purpose: The conductor Sag temperature or the lessor of the conductor Sag temperature or 93°C for HAC conductors.	Participant	Integer	0 to 500	°C	M
Winter (10°C ambient) 15 minute Short Term Emergency (STE) Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	0 to 9999	A	M
Conductor Temperature for Winter 15 min. STE Rating (°C)	Purpose: The conductor Sag temperature or the lessor of the conductor Sag temperature or 127°C for HAC conductors.	Participant	Integer	0 to 500	°C	М
Pre-load for Winter 15- minute STE Rating (A)	Purpose: The continuous load supplied by the circuit section prior to loading the circuit to the STE. This value is used in establishing the corresponding rating.	Participant	Integer	Range: 0 to 9999	A	M
Summer (X °C ambient) Continuous Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	0 to 9999	A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Conductor Temperature for Summer Continuous Rating (°C)	Purpose: The conductor Sag temperature or the lessor of the conductor Sag temperature or 93°C for HAC conductors.	Participant	Integer	0 to 500	°C	M
Summer (X °C ambient) 15 minute Short Term Emergency (STE) Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	0 to 9999	A	M
Conductor Temperature for Summer 15 minute STE Rating (°C)	Purpose: The conductor Sag temperature or the lessor of the conductor Sag temperature or 127°C for HAC conductors.	Participant	Integer	0 to 500	°C	М
Pre-load for Summer 15- minute STE Rating (A)	Purpose: The continuous load supplied by the circuit section prior to loading the circuit to the STE. This value is used in establishing the corresponding rating.	Participant	Integer	Range: 0 to 9999	A	М
Planning						
Conductor Temperature for Winter Continuous Rating (°C)	Purpose: The lessor of 93°C or the conductor Sag temperature used to establish the corresponding rating.	Participant	Integer	Default = 93 Typically 93°C or sag temperature if lower Range: 0 to 500	°C	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Conductor Temperature for Winter Long- Term Emergency (LTE) Rating (°C)	Purpose: The lessor of 127°C or the conductor Sag temperature used to establish the corresponding rating.	Participant	Integer	Default = 127 (Typically 127°C or sag temperature if lower) Long-Term Emergency Rating is limited to 50 hours per year Range: 0 to 500	°С	M
Conductor Temperature for 15-minute Winter Short Term Emergency (STE) Rating (°C)	Purpose: The lessor of 150°C or the conductor Sag temperature used to establish the corresponding rating.	Participant	Integer	Default = 150 (Typically 150°C or sag temperature if lower; 127°C for HAC conductors) Short-Term Rating limited to 15 minutes Range: 0 to 500	°C	M
Winter (10°C ambient) Continuous Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	Range: 0 to 9999	А	M
Winter (10°C ambient) Long- Term Emergency (LTE) Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	Range: 0 to 9999	А	M
Winter (10°C ambient) 15- minute Short Term Emergency (STE) Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	Range: 0 to 9999	А	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Pre-load for Winter (10°C ambient) 15- minute STE Rating(A)	Purpose: The continuous load supplied by the circuit section prior to loading the circuit to the STE. This value is used in establishing the corresponding rating.	Participant	Integer	Range: 0 to 9999	A	M
Conductor Temperature for Summer Continuous Rating (°C)	Purpose: The lessor of 93°C or the conductor Sag temperature used to establish the corresponding rating.	Participant.	Integer	Default = 93 Typically 93°C or sag temperature if lower Range: 0 to 500	°C	M
Summer (X °C ambient) Continuous Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	Range: 0 to 9999	A	M
Conductor Temperature for Summer Long- term Emergency (LTE) Rating (°C)	Purpose: The lessor of 127°C or the conductor Sag temperature used to establish the corresponding rating.	Participant.	Integer	Default = 127 (Typically 127°C or sag temperature if lower) Long-Term Emergency Rating is limited to 50 hours per year Range: 0 to 500	°C	M
Summer (X °C ambient) Long- Term Emergency (LTE) Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	Range: 0 to 9999	A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Conductor Temperature for 15-minute Summer Short- term Emergency (STE) Rating (°C)	Purpose: The lessor of 150°C or the conductor Sag temperature used to establish the corresponding rating.	Participant.	Integer	Default = 150 (Typically 150°C or sag temperature if lower; 127°C for HAC conductors) Short-Term Rating limited to 15 minutes Range: 0 to 500	°C	M
Summer (X °C ambient) 15- minute Short Term Emergency (STE) Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	Range: 0 to 9999	Α	M
Pre-load for Summer 15- minute STE Rating(A)	Purpose: The continuous load supplied by the circuit section prior to loading the circuit to the STE. This value is used in establishing the corresponding rating.	Participant	Integer	Range: 0 to 9999	А	M
Shares a common structure	Purpose: Identifies that this Overhead Circuit Section shares a common structure with another Overhead Circuit Section for more than 1 mile.	Participant	Boolean	Y/N	N/A	M
CKT	Purpose: Circuit section identifier in the IESO base case.	Participant	Text	N/A	N/A	М
DC Circuit Section Resistance	Purpose: Circuit section DC resistance.	Participant	Decimal number	≥0	Ohms/phase	М

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
INDVP	Purpose: Real part of total circuit section GMD-induced electric field. INDUCEDV = INDVP + j INDVQ volts • When INDUCEDV is not specified, GIC activity calculates this according to its options specified • When INDUCEDV is specified, it is used as GMD induced on that branch • When INDUCEDV is specified as INDVP = 0.0 and INDVQ = 0.0, then that branch is treated as part of the GIC DC network but does not have GMD induced voltage, like "underground pipe-type cables (cables enclosed in the steel pipe)."	Participant	Decimal number	N/A	Volts	0
INDVQ	Purpose: Imaginary part of total circuit section GMD-induced electric field. INDUCEDV = INDVP + j INDVQ volts • When INDUCEDV is not specified, GIC activity calculates this according to its options specified • When INDUCEDV is specified, it is used as GMD induced on that branch • When INDUCEDV is specified as INDVP = 0.0 and INDVQ = 0.0, then that branch is treated as part of the GIC DC network but does not have GMD induced voltage, like "underground pipe-type cables (cables enclosed in the steel pipe)."	Participant	Decimal number	N/A	Volts	0
DC Line Shunt Resistance at Bus I End of Circuit Section	Purpose: DC resistance of the line shunt at the bus I (from bus) end of a circuit section.	Participant	Decimal number	≥0	Ohms/phase	0

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
DC Line Shunt Resistance at Bus J End of Circuit Section	Purpose: DC resistance of the line shunt at the bus J (to bus) end of a circuit section.	Participant	Decimal number	N/A	Ohms/phase	0
GIC Circuit Section Comment	Purpose: Participant supplied comments.	Participant	Text	N/A	N/A	0

6.2 Underground Circuit Section

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique operating name used to identify device in communications by participant, transmitter or IESO.	Participant	Free Text	N/A	N/A	M
Comments		Participant	Free Text	N/A	N/A	0
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Start of Section	Purpose: Identify the starting junction or terminal to indicate its electrical positioning.	Participant	Free Text	Substation or Junction name	N/A	М
End of Section	Purpose: Identify the ending junction or terminal to indicate its electrical positioning.	Participant	Free Text	Substation or Junction name	N/A	М

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Section Length	Purpose: Indicate the physical dimensions of the underground conductor.	Participant	Decimal number	0 to 9999	km	М
Conductor Size	Purpose: Circular mils of the conductor.	Participant	Integer number	0 to 99999	kcmil	M
Cable Type	Purpose: Type of cable, e.g. XLPE	Participant	Free Text	N/A	N/A	M
Rated Voltage	Purpose: line to line voltage at which impedances are calculated	Participant	Integer	0 to 9999	kV	M
Positive Sequence Resistance R1 at Rated Voltage and 100 MVA (PU)	Purpose: Circuit parameters	Participant	Decimal number	0 to 9999	PU	M
Positive Sequence Reactance X1 at Rated Voltage and 100 MVA (PU)	Purpose: Circuit parameters	Participant	Decimal number	0 to 9999	PU	M
Positive Sequence Susceptance B1 at Rated Voltage and 100 MVA (PU)	Purpose: Circuit parameters	Participant	Decimal number	0 to 9999	PU	М
Zero Sequence Resistance Ro at Rated Voltage and 100 MVA (PU)	Purpose: Circuit parameters	Participant	Decimal number	0 to 9999	PU	М
Zero Sequence Reactance Xo at Rated Voltage and 100 MVA (PU)	Purpose: Circuit parameters	Participant	Decimal number	0 to 9999	PU	М
Zero Sequence Susceptance Bo at Rated Voltage and 100 MVA (PU)	Purpose: Circuit parameters	Participant	Decimal number	0 to 9999	PU	M

LST-48 Register Facility Help File v8.0.docx

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Ratings	S					
Winter Continuous Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	0 to 9999	A	М
Conductor Temperature for Winter Continuous Rating (°C)	Purpose: The maximum conductor temperature used to establish the corresponding rating.	Participant	Integer	0 to 500	°C	M
Winter 15-minute Short Term Emergency (STE) Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	0 to 9999	A	M
Conductor Temperature for Winter 15-minute STE Rating (°C)	Purpose: The maximum conductor temperature used to establish the corresponding rating.	Participant	Integer	0 to 500	°C	M
Pre-load for Winter 15-minute STE Rating (A)	Purpose: The continuous load supplied by the circuit section prior to loading the circuit to the STE. This value is used in establishing the corresponding rating.	Participant	Integer	0 to 9999	A	M
Summer Continuous Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	0 to 9999	A	M
Conductor Temperature for Summer Continuous Rating (°C)	Purpose: The maximum conductor temperature used to establish the corresponding rating.	Participant	Integer	0 to 500	°C	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Summer 15 - minute Short Term Emergency (STE) Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	0 to 9999	A	М
Conductor Temperature for Summer 15- minute STE Rating (°C)	Purpose: The maximum conductor temperature used to establish the corresponding rating.	Participant	Integer	0 to 500	°C	М
Pre-load for Summer 15- minute STE Rating (A)	Purpose: The continuous load supplied by the circuit section prior to loading the circuit to the STE. This value is used in establishing the corresponding rating.	Participant	Integer	0 to 9999	A	М
Planning						
Conductor Temperature for Winter Continuous Rating (°C)	Purpose: The maximum conductor temperature used to establish the corresponding rating.	Participant	Integer	0 to 500	°C	M
Winter Continuous Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	0 to 9999	A	М
Winter X-Hour Long-Term Emergency Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	0 to 9999	A	М
Number of hours (X) used in Winter LTE Rating (hours)	Purpose: Specified period of time used in establishing the corresponding rating.	Participant	Integer	0 to 999	hours	М

LST-48 Register Facility Help File v8.0.docx

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Conductor Temperature for Winter (X) hours LTE Rating (°C)	Purpose: The maximum conductor temperature used to establish the corresponding rating.	Participant	Integer	0 to 500	°C	M
Conductor Temperature for Winter STE Rating (°C)	Purpose: The maximum conductor temperature used to establish the corresponding rating.	Participant	Integer	0 to 500	°C	M
Pre-load for Winter 15-minute STE Rating (A)	Purpose: The continuous load supplied by the circuit section prior to loading the circuit to the STE. This value is used in establishing the corresponding rating.	Participant	Integer	0 to 9999	A	M
Winter 15-Minute Short-Term Emergency Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	0 to 9999	A	M
Conductor Temperature for Summer Continuous Rating (°C)	Purpose: The maximum conductor temperature used to establish the corresponding rating.	Participant	Integer	0 to 500	°C	M
Summer Continuous Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	0 to 9999	A	M
Conductor Temperature for Summer (X) hour LTE Rating (°C)	Purpose: The maximum conductor temperature used to establish the corresponding rating.	Participant	Integer	0 to 500	°C	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Summer X-Hour Long-Term Emergency Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	0 to 9999	A	M
Number of hours (X) used in Summer LTE Rating (hours)	Purpose: Specified period of time used in establishing the corresponding rating.	Participant	Integer	0 to 999	Hours	M
Conductor Temperature for Summer STE Rating (°C)	Purpose: The maximum conductor temperature used to establish the corresponding rating.	Participant	Integer	0 to 500	°C	M
Summer 15- Minute Short- Term Emergency (STE) Rating (A)	Purpose: The maximum constant load that can be carried for the specified time without exceeding temperature limits.	Participant	Integer	0 to 9999	A	М
Pre-load for Summer 15- minute STE Rating (A)	Purpose: The continuous load supplied by the circuit section prior to loading the circuit to the STE. This value is used in establishing the corresponding rating.	Participant	Integer	0 to 9999	A	M
СКТ	Purpose: Circuit section identifier in the IESO base case.	Participant	Text	N/A	N/A	М
DC Circuit Section Resistance	Purpose: Circuit section DC resistance.	Participant	Decimal number	≥0	Ohms/phase	М

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
INDVP	Purpose: Real part of total circuit section GMD-induced electric field. INDUCEDV = INDVP + j INDVQ volts • When INDUCEDV is not specified, GIC activity calculates this according to its options specified • When INDUCEDV is specified, it is used as GMD induced on that branch • When INDUCEDV is specified as INDVP = 0.0 and INDVQ = 0.0, then that branch is treated as part of the GIC DC network but does not have GMD induced voltage, like "underground pipe-type cables (cables enclosed in the steel pipe)."	Participant	Decimal number	N/A	Volts	M
INDVQ	Purpose: Imaginary part of total circuit section GMD-induced electric field. INDUCEDV = INDVP + j INDVQ volts • When INDUCEDV is not specified, GIC activity calculates this according to its options specified • When INDUCEDV is specified, it is used as GMD induced on that branch • When INDUCEDV is specified as INDVP = 0.0 and INDVQ = 0.0, then that branch is treated as part of the GIC DC network but does not have GMD induced voltage, like "underground pipe-type cables (cables enclosed in the steel pipe)."	Participant	Decimal number	N/A	Volts	M
DC Line Shunt Resistance at Bus I End of Circuit Section	Purpose: DC resistance of the line shunt at the bus I (from bus) end of a circuit section.	Participant	Integer	N/A	Ohms/phase	0

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
DC Line Shunt Resistance at Bus J End of Circuit Section	Purpose: DC resistance of the line shunt at the bus J (to bus) end of a circuit section.	Participant	Integer	N/A	Ohms/phase	0
GIC Circuit Section Comment	Purpose: Participant supplied comments.	Participant	Text	N/A	N/A	0

6.3 Parallel Circuit Section Mutual Impedance

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Mutual Impedance Parallel Circuit Identifier	Purpose: Indicate any parallel circuit identifier per section (if applicable)	Participant	Free Text	N/A	N/A	0
Mutual Impedance Parallel Circuit Section Identifier	Purpose: Indicate any parallel circuit identifier per section (if applicable)	Participant	Free Text	N/A	N/A	0
Mutual Impedance Rm	Purpose: Equipment Data (if applicable, per section)	Participant	Decimal number	0 to 9999	Ohm	0
Mutual Impedance Xm	Purpose: Equipment Data (if applicable, per section)	Participant	Decimal number	0 to 9999	Ohm	0

6.4 Shared Towers

Shared Towers	-supports	-has	Overhead Circuit Section
	22	0*	


This is an entity that identifies that there are shared towers (and the number of towers). There is no registration of individual towers.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Number of Shared Towers	Purpose: Number of shared towers between a pair of circuit sections	Participant	Integer	0 to 9999	N/A	М
Comments		Participant	Free Text	N/A	N/A	0

7 FACTS Devices

There are many devices under this category that are related to each other as follows:

FACTS Device: Static VAR Compensator (SVC)

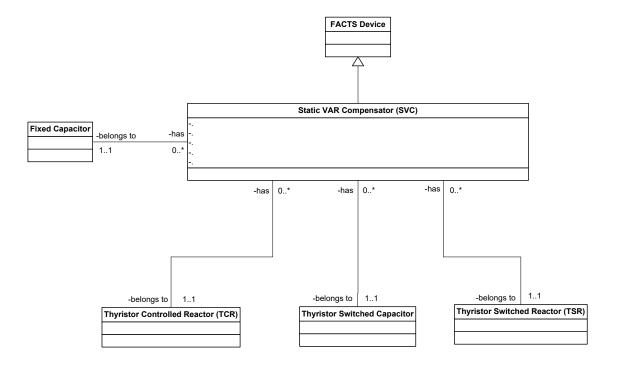

7.1.1 Static VAR Compensator (SVC)

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique operating name used to identify device in communications by participant, transmitter or IESO.	Participant	Free text	N/A	N/A	М
Manufacturer Name	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	M
Manufacturer Model	Purpose: Refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	0
Equipment Nameplate Photo	Electronic photograph of the device's nameplate	Participant	Upload document	PNG, PDF, GIF or JPEG file	N/A	М
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
NPCC-defined Bulk Power System Flag	Purpose: Does this equipment meet the "Bulk Power System" (BPS) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
Registration status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Rated Voltage	The rated voltage of the SVC, usually specified at the high side of Main Output Transformer	Participant	Decimal number with validation	[0.0 , 1500]	kV	M
Maximum Continuous Rated Voltage	The maximum continuous rated voltage of the SVC, usually specified at the high side of Main Output Transformer	Participant	Decimal number with validation	[0.0 , 1500]	kV	М
Maximum Continuous Inductive Rating at Nominal Voltage	Max inductive rating of this SVC, usually measured at the Point of Common Coupling	Participant	Decimal number	[0,9999]	Mvar	M
Maximum Continuous Capacitive Rating at Nominal Voltage	Max capacitive rating of this SVC, usually measured at the Point of Common Coupling	Participant	Decimal number	[0,9999]	Mvar	M
Maximum Short- Term Inductive Rating at Nominal Voltage	Max short term inductive rating of this SVC	Participant	Decimal number	[0,9999]	Mvar	M
Maximum Short- Term Inductive Rating Duration (s)	Duration of short-term inductive rating	Participant	Decimal number	[0,9999]	Seconds	M
Maximum Short- Term Capacitive Rating at Nominal Voltage	Max short term capacitive rating of this SVC	Participant	Decimal number	[0,9999]	Mvar	M
Maximum Short- Term Capacitive Rating Duration	Duration of short-term capacitive rating	Participant	Decimal number	[0,9999]	Seconds	М

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Coupling Transformer Flag	The existence of a step down or a step up transformer in this SVC	Participant	Boolean	Y/N	N/A	М
Maximum Control Slope	The max droop allowed in the SVC control system	Participant	Decimal number	[0,100]	%	М
Minimum Control Slope	Purpose : The min droop allowed in the SVC control system	Participant	Decimal number	[0,100]	%	М
Number of Steps Control Slope	Purpose : The number of TSC steps for a TSC only SVC. I.E. the number of capacitor switches to go from 0 Mvar to full Mvar. If the SVC is continuous, this field should be blank.	Participant	Integer	[0, 999]	Step(s)	0
Capability Curve	Purpose : Reactive Power vs Voltage or voltage vs reactive power curves	Participant	Upload document	N/A	N/A	0
Total Filter Contribution at Nominal Voltage	Purpose : Total reactive power from harmonic filters	Participant	Decimal number	[-9999,9999]	Mvar	0
Single Line Diagram	Purpose : Single Line diagram of the SVC	Participant	Upload document	N/A	N/A	0
Voltage Control Point	Purpose: regulated bus (i.e. Name of Point)	Participant	Free text	N/A	N/A	М
Outage Reporting Required Flag	Purpose: Indicate whether outages to the equipment must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	М

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Outage Criticality Level	Purpose: Criticality Level is used to determine equipment outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the equipment to the IESO for approval. Mandatory if Outage Reporting Required Flag = "Y".	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0
Virtual Flag	Purpose: Indicate whether the equipment is virtual (non-physical).	IESO	Boolean	Y/N	N/A	М

7.1.2 Thyristor Controlled Reactor

Note: TCR retains registration status for consistency with all other SVC child entities (even though SVC must have exactly one TCR).

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Equipment Name	Purpose : Unique name for the equipment within a specified scope (e.g. windings unique within transformer but not within facility)	Solution (no manual override)	Text	Facility-svcName.TCR1 e.g. FACILITY-SVC2.TCR1	N/A	М
Manufacturer Name	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	0

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Manufacturer Model	Purpose: Refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	0
Equipment Nameplate Photo	Electronic photograph of the device's nameplate	Participant	Upload document	PNG, PDF, GIF or JPEG file	N/A	M
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
NPCC-defined Bulk Power System Flag	Purpose: Does this equipment meet the "Bulk Power System" (BPS) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
Registration status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Rated Voltage	The rated voltage of the SVC, usually specified at the high side of Main Output Transformer.	Participant	Decimal number with validation	[0.0 , 1500]	kV	М
Rated Reactive Power at Rated Voltage	The total reactive power from TSRs (Currently it is stored in NOMINAL_VOLTAGE column)	Participant	Decimal number	[0, 9999]	Mvar	М
Connection Type	The connection type of the TCRs	Participant	Drop down	Delta, Wye, Delta and Wye	N/A	М

7.1.3 Thyristor Switched Capacitor

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Equipment Name	Unique name for the equipment within a specified scope (e.g. windings unique within transformer but not within facility)	Solution (no manual override)	Text	Facility-svcName.TSC1 e.g. ESSA-SVC2.TSC1	N/A	М
Manufacturer Name	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	0
Manufacturer Model	Purpose: Refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	0
Equipment Nameplate Photo	Electronic photograph of the device's nameplate	Participant	Upload document	PNG, PDF, GIF or JPEG file	N/A	М
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
NPCC-defined Bulk Power System Flag	Purpose: Does this equipment meet the "Bulk Power System" (BPS) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Rated Voltage	The rated voltage of the SVC, usually specified at the high side of Main Output Transformer	Participant	Decimal number with validation	[0.0 , 1500]	kV	М

LST-48 Register Facility Help File v8.0.docx

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Rated Reactive Power at Rated Voltage	The total reactive power from TSRs (Currently it is stored in NOMINAL_VOLTAGE column)	Participant	Decimal number	[0, 9999]	Mvar	M
Connection Type	The connection type of the TSCs	Participant	Drop down	Delta, Wye, Delta and Wye	N/A	М
Dynamic Only Application Flag	This flag is set ON when this TSC is designed for a contingency, i.e. a SPS	Participant	Boolean	Y/N	N/A	0
Dynamic Duration(s)	The amount of time when TSCs are active after a contingency	Participant	Decimal number	[0, 9999]	seconds	0
Tuned Frequency	Each branch consists of thyristors, reactors, and capacitors. The tuned frequency is 1/(377*C*L)	Participant	Decimal number	[0, 9999]	Hz	0

7.1.4 Thyristor Switched Reactor

Thyristor Switched Reactor (TSR) is a special case of a TCR (section 11.1.1) and has only two states: Fully on or fully off.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Equipment name	Unique name for the equipment within a specified scope (e.g. windings unique within transformer but not within facility)	Solution (no manual override)	Text	Facility-svcName.TSR1 e.g. ESSA-SVC2.TSR1	N/A	M
Manufacturer Name	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	0

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Manufacturer Model	Purpose: Refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	0
Equipment Nameplate Photo	Purpose: Electronic photograph of the device's nameplate	Participant	Upload document	PNG, PDF, GIF or JPEG file	N/A	M
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
NPCC-defined Bulk Power System Flag	Purpose: Does this equipment meet the "Bulk Power System" (BPS) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Rated Voltage	Purpose: The rated voltage of the SVC, usually specified at the high side of Main Output Transformer.	Participant	Decimal number with validation	[0.0 , 1500]	kV	М
Rated Reactive Power at Rated Voltage	Purpose: The total reactive power from TSRs (Currently it is stored in NOMINAL_VOLTAGE column)	Participant	Decimal number	[0, 9999]	Mvar	М
Connection Type	Purpose: The connection type or the internal connection of the TSRs	Participant	Drop down	Delta, Wye, Delta and Wye	N/A	М
Dynamic Only Application Flag	Purpose: This flag is set ON when this TSR is designed for a contingency, i.e. a SPS	Participant	Boolean	Y/N	N/A	0
Dynamic Duration	Purpose: The amount of time when TSRs are active after a contingency	Participant	Decimal number	[0, 9999]	seconds	0

7.1.5 Fixed Capacitor

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Equipment Name	Purpose: Unique name for the equipment within a specified scope (e.g. windings unique within transformer but not within facility)	Solution (no manual override)	Text	Facility-svcName.FC1 e.g. FACILITY- SVC2.FixedCap1	N/A	М
Manufacturer Name	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	0
Manufacturer Model	Purpose: Refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	0
Equipment Nameplate Photo	Purpose: Electronic photograph of the device's nameplate	Participant	Upload document	PNG, PDF, GIF or JPEG file	N/A	М
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
NPCC-defined Bulk Power System Flag	Purpose: Does this equipment meet the "Bulk Power System" (BPS) definition of electrical components?	IESO	Boolean	Y/N	N/A	M
Tuned Frequency	Each branch consists of Thyristor, reactors, and capacitors. The tuned frequency is 1/(377*C*L) c=capacitance; l=inductance	Participant	Decimal number	[0, 9999]	Hz	0
Rated Voltage	The line to line rated voltage of the SVC, usually specified at the high side of Main Output Transformer	Participant	Decimal number with validation	[0.0 , 1500]	kV	М

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Rated Reactive Power at Rated Voltage	Total Fixed Capacitor Rating at Nominal Voltage (Currently it is stored in NOMINAL_VOLTAGE RATING column)	Participant	Decimal number	[0,9999]	Mvar	Μ
Tuned Frequency	Each branch consists of Thyristor, reactors, and capacitors. The tuned frequency is 1/(377*C*L)	Participant	Decimal number	[0, 9999]	Hz	0
Connection Type	The connection type or the internal connection of the TSRs	Participant	Drop down	Delta, Wye, Delta and Wye	N/A	М

7.1.6 Static Synchronous Compensator (STATCOM)

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique operating name used to identify device in communications by participant, transmitter or IESO.	Participant	Free text	N/A	N/A	М
Manufacturer Name	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	M
Manufacturer Model	Purpose: Refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	0
Equipment Nameplate Photo	Purpose: Electronic photograph of the device's nameplate	Participant	Upload document	PNG, PDF, GIF or JPEG file	N/A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
NPCC-defined Bulk Power System Flag	Purpose: Does this equipment meet the "Bulk Power System" (BPS) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Rated Voltage	Purpose: The line to line rated voltage of the STATCOM	Participant	Decimal number with validation	[0.0 , 1500]	kV	М
Maximum Continuous Rated Voltage	Purpose: The maximum continuous rated voltage of the STATCOM	Participant	Decimal number with validation	[0.0 , 1500]	kV	М
Maximum Continuous Inductive Rating at Nominal Voltage	Purpose: Max inductive rating of this STATCOM, i.e. without short term overloading capability	Participant	Decimal number	[0,9999]	Mvar	M
Maximum Continuous Capacitive Rating at Nominal Voltage	Purpose: Max capacitive rating of this STATCOM, i.e. without short term overloading capability	Participant	Decimal number	[0,9999]	Mvar	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Maximum Short- Term Inductive Rating at Nominal Voltage	Purpose: Max short term inductive rating of this STATCOM	Participant	Decimal number	[0,9999]	Mvar	M
Maximum Short- Term Inductive Rating Duration	Purpose: Duration of short-term inductive rating	Participant	Decimal number	[0,9999]	Seconds	М
Maximum Short- Term Capacitive Rating at Nominal Voltage	Purpose: Max short term capacitive rating of this STATCOM	Participant	Decimal number	[0,9999]	Mvar	M
Maximum Short- Term Capacitive Rating Duration	Purpose: Duration of short-term capacitive rating	Participant	Decimal number	[0,9999]	Seconds	М
Coupling Transformer Flag	Purpose: The existence of a step down or a step up transformer in this STATCOM	Participant	Boolean	Y/N	N/A	М
Maximum Control Slope	Purpose: The max droop allowed in the STATCOM control system	Participant	Decimal number	[0,100]	%	М
Minimum Control Slope	Purpose: The min droop allowed in the STATCOM control system	Participant	Decimal number	[0,100]	%	М
Capability Curve	Purpose: Reactive Power vs Voltage or voltage vs reactive power graphs	Participant	Upload document		N/A	0
Total Filter Contribution at Nominal Voltage	Purpose: Total reactive power from harmonic filters	Participant	Decimal number	[-9999,9999]	Mvar	0
Voltage Control Point	Purpose: regulated bus (i.e. Name of Point)	Participant	Free text	N/A	N/A	М
Single Line Diagram	Purpose: SLD of the STATCOM connections or the internal STATCOM	Participant	Upload document	N/A	N/A	0
Outage Reporting Required Flag	Purpose: Indicate whether outages to the equipment must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	М

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Outage Criticality Level	Purpose: Criticality Level is used to determine equipment outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the equipment to the IESO for approval. Mandatory if Outage Reporting Required Flag = "Y".	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0
Virtual Flag	Purpose: Indicate whether the equipment is virtual (non-physical).	IESO	Boolean	Y/N	N/A	M

7.1.7 Series Capacitor

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique operating name used to identify device in communications by participant, transmitter or IESO.	Participant	Free text	N/A	N/A	M
Manufacturer Name	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	М
Manufacturer Model	Purpose: Refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	0

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Equipment Nameplate Photo	Electronic photograph of the device's nameplate	Participant	Upload document	PNG, PDF, GIF or JPEG file	N/A	M
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	M
NPCC-defined Bulk Power System Flag	Purpose: Does this equipment meet the "Bulk Power System" (BPS) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Maximum Continuous Operating Voltage	Purpose: The maximum continuous operating voltage of Series capacitor	Participant	Decimal number	[0, 9999]	kV	M
Rating, Qr at Nominal Voltage	Purpose: Reactive power from this Series capacitor at nominal voltage	Participant	Decimal number	[0, 9999]	Mvar	М
Degree of Compensation	Purpose: The ratio between the capacitor impedance and the line impedance	Participant	Decimal number	[-100,100]	%	М
Reactance, Xc	Purpose: The reactance of the series capacitor	Participant	Decimal number	[-9999, 9999]	Ohm	М
Maximum Continuous Rated Current, Ir	Purpose: The maximum continuous current of the series capacitor	Participant	Decimal number	[0, 9999]	A	0
LTE Rating -Long- term Emergency [2 hours]	Purpose: The limited time rating of the series capacitor	Participant	Decimal number	[0, 9999]	А	0

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
STE Rating -15 minute	Purpose: The limited time rating of the series capacitor	Participant	Decimal number	[0, 9999]	A	0
Segment Rated Voltage, Vr	Purpose: The line to line rated voltage of the series capacitor	Participant	Decimal number	[0, 9999]	kV	0
Rated Symmetrical Short Circuit Capability	Purpose: The highest value of the symmetrical component of fault current which the device will be required to interrupt at rated maximum voltage and on the standard operating duty.	Participant	Decimal number	[-9999, 9999]	kA	0
Series Capacitor Single Line Diagram	Purpose: The SLD of the series capacitor	Participant	Upload document	PNG, PDF, GIF or JPEG file	N/A	0
Outage Reporting Required Flag	Purpose: Indicate whether outages to the equipment must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	М
Outage Criticality Level	Purpose: Criticality Level is used to determine equipment outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the equipment to the IESO for approval. Mandatory if Outage Reporting Required	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0
Virtual Flag	Flag = "Y". Purpose: Indicate whether the equipment is virtual (non-physical).	IESO	Boolean	Y/N	N/A	M

8 Meteorological Collection Devices


Business rules:

A Meteorological Collection Device must belong to exactly one facility.

2022-03-02 Page **111** of **186**

Meteorological Collection Devices are specific to only solar and wind generating facilities

Meteorological Collection Devices

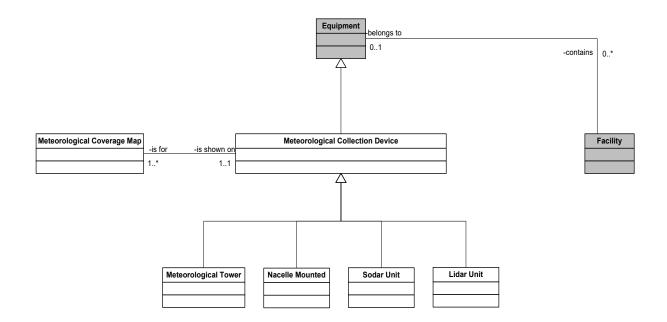

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Meteorological Collection Device Type	Purpose: The type of collection device.	Participant	Drop Down	Meteorological Tower Nacelle mounted SIDAR unit LIDAR unit		M
Equipment Name	Unique name for the equipment within a specified scope (e.g. windings unique within transformer but not within facility)	Solution (no manual override)	Text	Facility.metType1 Exception: Facility-NacMT- WindTurbine#	N/A	M
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Latitude	Physical location (GPS coordinates) of each device (North).	Participant	Numeric Text (North is default) The latitude falls within 40-50 degrees N and the longitude falls within 70- 90degrees W (see above for explanation of negative values, can be ok in some cases)	Example 43°N,23 minutes ,00 seconds Would be entered as 43.38333	Decimal Degrees	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Longitude	Physical location (GPS coordinates) of each device (West).	Participant	Numeric Text (West is default) The latitude falls within 40-50 degrees N and the longitude falls within 70- 90degrees W (see above for explanation of negative values, can be ok in some cases)	Example 79° W,42 minutes, 00 seconds Would be entered as 79.7000	Decimal Degrees	M
Measurement Height above Ground	Height from ground level of the measurement device.	Participant	Numeric Text	0-600	Meters	M
Measurement Elevation above Sea Level	Elevation above sea level of the measurement device	Participant	Numeric Text	0-600	Meters	М

8.1.1 Meteorological Coverage Map

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Meteorological	Purpose: Participant will upload a	Participant	Upload	N/A	N/A	М
Coverage Map	map of where the meteorological		Document			
	devices are and the associated					
	renewable generation units are.					
	Only Mandatory for solar or wind facilities. Mandatory upload during the Submit MET Collection Device Tasks.					
	Map shall also include an appendix that list the GPS coordinates (in Decimal Degree format), height above ground and elevation above sea level) of each turbine and MET collection device.					

8.1.2 Meteorological Tower

Additional attributes for meteorological tower equipment.

8.1.2.1 Business Rules:

Facility Size Total number of meteorological towers per facility

Less than 10MW None

10MW to less than 100MW 1 minimum

100MW to less than 200MW 2 minimum

200MW to less than 300MW 3 minimum

300MW to less than 400MW 4 minimum

Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
measure wind direction accurately. Either this is provided at a Met Tower or at a Nacelle. Some nacelle mounted wind direction measurement devices	Participant	Numeric text	0-360	Degrees	0
Hub direction is used in order to track the wind and does not continue tracking when the turbine is not generating. Wind direction measured at the nacelle may only be used if properly calibrated and if it continues to be provided when the turbine is not					
	All meteorological towers should measure wind direction accurately. Either this is provided at a Met Tower or at a Nacelle. Some nacelle mounted wind direction measurement devices are only able to provide hub direction. Hub direction is used in order to track the wind and does not continue tracking when the turbine is not generating. Wind direction measured at the nacelle may only be used if properly calibrated and if it continues	All meteorological towers should measure wind direction accurately. Either this is provided at a Met Tower or at a Nacelle. Some nacelle mounted wind direction measurement devices are only able to provide hub direction. Hub direction is used in order to track the wind and does not continue tracking when the turbine is not generating. Wind direction measured at the nacelle may only be used if properly calibrated and if it continues to be provided when the turbine is not	All meteorological towers should measure wind direction accurately. Either this is provided at a Met Tower or at a Nacelle. Some nacelle mounted wind direction measurement devices are only able to provide hub direction. Hub direction is used in order to track the wind and does not continue tracking when the turbine is not generating. Wind direction measured at the nacelle may only be used if properly calibrated and if it continues to be provided when the turbine is not	All meteorological towers should measure wind direction accurately. Either this is provided at a Met Tower or at a Nacelle. Some nacelle mounted wind direction measurement devices are only able to provide hub direction. Hub direction is used in order to track the wind and does not continue tracking when the turbine is not generating. Wind direction measured at the nacelle may only be used if properly calibrated and if it continues to be provided when the turbine is not	All meteorological towers should measure wind direction accurately. Either this is provided at a Met Tower or at a Nacelle. Some nacelle mounted wind direction measurement devices are only able to provide hub direction. Hub direction is used in order to track the wind and does not continue tracking when the turbine is not generating. Wind direction measured at the nacelle may only be used if properly calibrated and if it continues to be provided when the turbine is not

8.1.3 Nacelle Mounted

This entity is specific to only solar and wind generating facilities.

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Wind Turbine that has the nacelle mounted	Purpose: Represent which wind turbine has the nacelle mounted	Participant	Free text	N/A	N/A	М
equipment Wind Direction Measurement Type	equipment installed All meteorological towers should measure wind direction accurately. Some nacelle mounted wind direction measurement devices are only able to provide hub direction. Hub direction is used in order to track the wind and does not continue tracking when the turbine is not generating. Wind direction measured at the nacelle may only be used if properly calibrated and if it continues to be provided when the turbine is not generating.	Participant	Numeric text	0-360	Degrees	M

9 Other Equipment

9.1 Switch

9.1.1 Circuit Switcher

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating	Purpose: Unique operating name used	Participant	Free Text	N/A	N/A	М
Nomenclature	to identify device in communications by					
	participant, transmitter or IESO.					

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Manufacturer	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	М
Manufacturer Model	Purpose: Refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	0
Equipment Nameplate Photo	Purpose: Electronic photograph of the device nameplate	Participant	Upload document	PNG, GIF or JPEG file	N/A	М
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	M
NPCC-defined Bulk Power System Flag	Purpose: Does this equipment meet the "Bulk Power System" (BPS) definition of electrical components?	IESO	Boolean	Y/N	N/A	M
Registration status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Rated Voltage	Purpose: The line to line rms value of the alternating voltage for which the device has been designed.	Participant	Decimal number with validation	0-1000	kV	M
Maximum Continuous Voltage	Purpose: The highest rms line-to-line voltage at which the device is intended to operate.	Participant	Decimal number with validation	0-1000	kV	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Rated Interrupting Time	Purpose: The maximum permissible interval between the energizing of the trip circuit at rated control voltage and rated fluid pressure of the operating mechanism and the interruption of the main circuit in all poles on an opening operation.	Participant	Decimal number with validation	0-1000	ms	M
Interrupting Medium	Purpose: The material used to facilitate the interruption of the arc during opening of a switching device.	Participant	Drop Down	SF6 Air Oil Vacuum	N/A	M
Rated Continuous Current	Purpose: Designated rms amperes at rated frequency which it shall be required to carry continuously without exceeding the limit of observable temperature rise for any of its parts.	Participant	Decimal number with validation	0-9999	A	M
Rated Symmetrical Short Circuit Capability	Purpose: The highest value of the symmetrical component of fault current which the device will be required to interrupt at rated maximum voltage and on the standard operating duty.	Participant	Decimal number with validation	0-1000	kA	M
Rated Asymmetrical Short Circuit Capability	Purpose: The highest value of the asymmetrical component of fault current which the device will be required to interrupt at rated maximum voltage and on the standard operating duty.	Participant	Decimal number with validation	0-1000	kA	М
Normally Open	Purpose: Is this equipment operated as normally open?	Participant	Boolean	Y/N	N/A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Contact Parting Time	Purpose: The interval between the time when the actuating quantity in the release circuit reaches the value causing actuation of the release and the instant when the primary arcing contacts have parted in all poles.	Participant	Decimal number with validation	0-1000	ms	M
Outage Reporting Required Flag	Purpose: Indicate whether outages to the equipment must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	М
Outage Criticality Level	Purpose: Criticality Level is used to determine equipment outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the equipment to the IESO for approval. Mandatory if Outage Reporting	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0
Virtual Flag	Required Flag = "Y". Purpose: Indicate whether the	IESO	Boolean	Y/N	N/A	M
	equipment is virtual (non-physical).		200.00.11	.,	,	

9.1.2 Disconnect Switch

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating	Purpose: Unique operating name used	Participant	Free Text	N/A	N/A	М
Nomenclature	to identify device in communications by					
	participant, transmitter or IESO.					

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Manufacturer	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	M
Manufacturer Model	Purpose: Refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	0
Equipment Nameplate Photo	Purpose: Electronic photograph of the device nameplate	Participant	Upload document	PNG, GIF or JPEG file	N/A	М
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
NPCC-defined Bulk Power System Flag	Purpose: Does this equipment meet the "Bulk Power System" (BPS) definition of electrical components?	IESO	Boolean	Y/N	N/A	M
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Rated Voltage	Purpose: The line to line rms value of the alternating voltage for which the device has been designed.	Participant	decimal number with validation	0-1000	kV	M
Maximum Continuous Voltage	Purpose : The highest rms line-to-line voltage at which the device is intended to operate.	Participant	decimal number with validation	0-1000	kV	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Rated Continuous Current	Purpose: Designated rms amperes at rated frequency which it shall be required to carry continuously without exceeding the limit of observable temperature rise for any of its parts.	Participant	Decimal number with validation	0-9999	A	M
Short Circuit Withstand Capability	Purpose : A measurement of the rated short time symmetrical withstands current magnitude.	Participant	Decimal number with validation	0-9999	kA	М
Motorized	Purpose: Can this equipment be operated remotely?	Participant	Boolean	Y/N	N/A	М
Normally Open	Purpose: Is this equipment operated as normally open?	Participant	Boolean	Y/N	N/A	М
Outage Reporting Required Flag	Purpose: Indicate whether outages to the equipment must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	М
Outage Criticality Level	Purpose: Criticality Level is used to determine equipment outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the equipment to the IESO for approval. Mandatory if Outage Reporting	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0
Virtual Flag	Required Flag = "Y". Purpose: Indicate whether the equipment is virtual (non-physical).	IESO	Boolean	Y/N	N/A	M

9.1.3 Circuit Breaker

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique operating name used to identify device in communications by participant, transmitter or IESO.	Participant	Free Text	N/A	N/A	М
Manufacturer	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	M
Manufacturer Model	Purpose: Refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	0
Equipment Nameplate Photo	Purpose: Electronic photograph of the device nameplate	Participant	Upload document	PNG, GIF or JPEG file	N/A	М
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
NPCC-defined Bulk Power System Flag	Purpose: Does this equipment meet the "Bulk Power System" (BPS) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Rated Voltage	Purpose: The line to line rms value of the alternating voltage for which the device has been designed.	Participant	Decimal number with validation	0-1000	kV	М

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Maximum Continuous Voltage	Purpose: Highest rms voltage for which the circuit breaker is designed and is the upper limit for operation.	Participant	decimal number with validation	0-1000	kV	M
Rated Interrupting Time	Purpose: The maximum permissible interval between the energizing of the trip circuit at rated control voltage and rated fluid pressure of the operating mechanism and the interruption of the main circuit in all poles on an opening operation.	Participant	Decimal number with validation	0-1000	ms	M
Interrupting Medium	Purpose: The material used to facilitate the interruption of the arc during opening of a switching device.	Participant	Drop Down	SF6 Air Oil Vacuum	N/A	М
Rated Continuous Current	Purpose: Designated rms amperes at rated frequency which it shall be required to carry continuously without exceeding the limit of observable temperature rise for any of its parts.	Participant	Decimal number with validation	0-9999	A	М
Rated Symmetrical Short Circuit Capability	Purpose: The highest value of the symmetrical component of fault current which the device will be required to interrupt at rated maximum voltage and on the standard operating duty.	Participant	Decimal number with validation	0-1000	kA	М
Rated Asymmetrical Short Circuit Capability	Purpose: The highest value of the asymmetrical component of fault current which the device will be required to interrupt at rated maximum voltage and on the standard operating duty.	Participant	Decimal number with validation	>0-1000	kA	M
Normally Open	Purpose: Is this equipment operated as normally open?	Participant	Boolean	Y/N	N/A	М

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Contact Parting Time	Purpose: The interval between the time when the actuating quantity in the release circuit reaches the value causing actuation of the release and the instant when the primary arcing contacts have parted in all poles.	Participant	Decimal number with validation	0-1000	ms	M
Outage Reporting Required Flag	Purpose: Indicate whether outages to the equipment must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	M
Outage Criticality Level	Purpose: Criticality Level is used to determine equipment outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the equipment to the IESO for approval.	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0
	Mandatory if Outage Reporting Required Flag = "Y".					
Virtual Flag	Purpose: Indicate whether the equipment is virtual (non-physical).	IESO	Boolean	Y/N	N/A	M

9.<u>1.4</u> Opener

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating	Purpose: Unique operating name used	Participant	Free Text	N/A	N/A	M
Nomenclature	to identify device in communications by					
	participant, transmitter or IESO.					

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Opener Type	Purpose: Specify the type of opener	Participant	Drop down list	Mid-span(MSO) Live-line (LLO) Temporary-line (TLO) Bolted (BO) Line-clamp (LC)	N/A	M
Registration status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	М
Rated Voltage	Purpose: The line to line rms value of the alternating voltage for which the device has been designed.	Participant	Decimal number with validation	0-1000	kV	М
Maximum Continuous Voltage	Purpose : The highest rms line-to-line voltage at which the device is intended to operate.	Participant	Decimal number with validation	0-1000	kV	М
Rated Continuous Current	Purpose: Designated rms amperes at rated frequency which it shall be required to carry continuously without exceeding the limit of observable temperature rise for any of its parts.	Participant	Decimal number with validation	0-9999	A	M
Normal Open	Purpose: Is this equipment operated as normally open?	Participant	Boolean	Y/N	N/A	М
Outage Reporting Required Flag	Purpose: Indicate whether outages to the equipment must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	М


Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Outage Criticality Level	Purpose: Criticality Level is used to determine equipment outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the equipment to the IESO for approval. Mandatory if Outage Reporting Required Flag = "Y".	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0
Virtual Flag	Purpose: Indicate whether the equipment is virtual (non-physical).	IESO	Boolean	Y/N	N/A	М

9.1.5 Switches excluded from online facility registration

The following types of equipment *are not* required to be registered and evaluated through the on-line facility registration process:

- Disconnect Switches (e.g. grounding disconnect switches, breaker disconnects or breaker isolating disconnect switches)
- Feeder Breakers

Diagram 1: Disconnect Switches



Switches of types found on Diagram 1, are not required to be registered. These are some examples:

- Grounding disconnect switches
 - o 251S47C-G
 - o 251W45LS-G
- Breaker disconnects or breaker isolating disconnect switches
 - o 251-S47C
 - o DL47-D
 - o DL45-D
 - o 251-W45LS

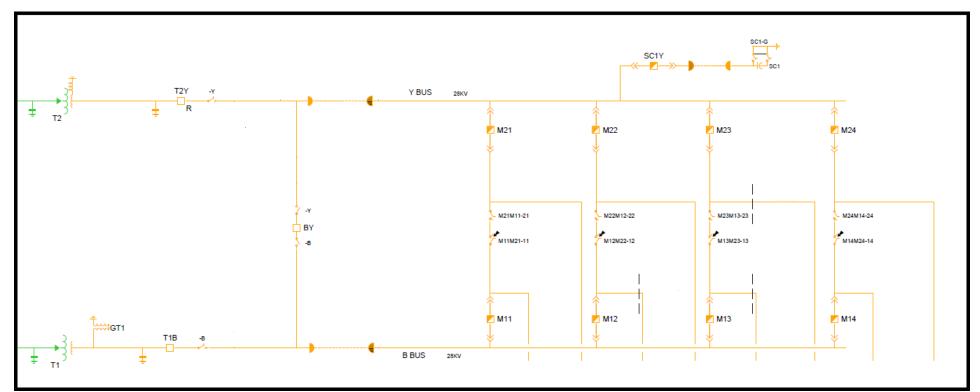


Diagram 2a: Feeder Breakers

Breakers in Diagram 2, are not required to be registered:

- M11
- M12
- M13
- M14
- M21
- M22
- M23
- o M24

Exception: At generating facilities with feeder breakers, the feeder breakers are required to be registered.

9.2 Capacitors and Reactors

9.2.1 Shunt Capacitor

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique operating name used to identify device in communications by participant, transmitter or IESO.	Participant	Free Text	N/A	N/A	М
Manufacturer	Purpose: The manufacturer is any natural or legal person who is responsible for designing and manufacturing a product with a view to placing it on the Community market "under his own name" (or trademark*).	Participant	Free text	N/A	N/A	M
Manufacturer Model	Purpose: Refers to a business model number in which the manufacturer sells its goods directly to the end user of the product.	Participant	Free text	N/A	N/A	0
Equipment Nameplate Photo	Purpose: Electronic photograph of the device nameplate	Participant	Upload document	PNG, GIF or JPEG file	N/A	М
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
NPCC-defined Bulk Power System Flag	Purpose: Does this equipment meet the "Bulk Power System" (BPS) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Rated Voltage	Purpose: The line to line rms value of the alternating voltage for which the device has been designed.	Participant	decimal number with validation	0-1000	kV	М
Rated reactive power,	Purpose: The reactive power at rated values of rated frequency and rated voltage.	Participant	decimal number with validation	0-1000	Mvar	М
Discharge Time	Purpose: Time delay required to discharge the capacitor bank prior to placing the capacitor bank back in service.	Participant	decimal number with validation	0-999999	ms	M
Current Limiting Reactor	Purpose: Value of the series inductance used to limit the severity of outrush currents from the capacitor bank into close-in line or bus faults.	Participant	decimal number with validation	0-9999	mH	M
Connection Configuration	Purpose: The method in which the three separate capacitor phases are connected to the power system.	Participant	Drop down	Wye Ungrounded Double Wye Ungrounded Delta	N/A	М
Automatic Switching Description	Purpose: Document providing details of automatic capacitor switching including triggers, measurement source, delays, etc.	Participant	Upload document	File Upload	N/A	0
Outage Reporting Required Flag	Purpose: Indicate whether outages to the equipment must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	М

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Outage Criticality Level	Purpose: Criticality Level is used to determine equipment outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the equipment to the IESO for approval. Mandatory if Outage Reporting Required Flag = "Y".	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0
Virtual Flag	Purpose: Indicate whether the equipment is virtual (non-physical).	IESO	Boolean	Y/N	N/A	М

9.2.2 Shunt Reactor

Shunt Reactor	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating	Purpose: Unique operating name used	Participant	Free Text	N/A	N/A	М
Nomenclature	to identify device in communications by					
	participant, transmitter or IESO.					
Manufacturer	Purpose: The manufacturer is any	Participant	Free text	N/A	N/A	M
	natural or legal person who is					
	responsible for designing and					
	manufacturing a product with a view to					
	placing it on the Community market					
	"under his own name" (or trademark*).					
Manufacturer	Purpose: Refers to a business model	Participant	Free text	N/A	N/A	0
Model	number in which the manufacturer sells					
	its goods directly to the end user of the					
	product.					

Shunt Reactor	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Equipment Nameplate Photo	Purpose: Electronic photograph of the device nameplate	Participant	Upload document	PNG, PDF, GIF or JPEG file	N/A	М
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
NPCC-defined Bulk Power System Flag	Purpose: Does this equipment meet the "Bulk Power System" (BPS) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Rated Voltage	Purpose: The line to line rms value of the alternating voltage for which the device has been designed.	Participant	Decimal number with validation	0-1000	kV	М
Rated reactive power	Purpose: The reactive power at rated values of rated frequency and rated voltage.	Participant	Decimal number with validation	0-1000	Mvar	М
Connection Configuration	Purpose: The method in which the three separate reactor phases are connected to the power system.	Participant	Drop down	Wye Grounded Wye Ungrounded	N/A	М
Outage Reporting Required Flag	Purpose: Indicate whether outages to the equipment must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	М
Outage Criticality Level	Purpose: Criticality Level is used to determine equipment outage request submission requirements. It determines how far in advance the market participant must submit an outage	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0

Shunt Reactor	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
	request for the equipment to the IESO for approval.					
	Mandatory if Outage Reporting Required Flag = "Y".					
Virtual Flag	Purpose: Indicate whether the equipment is virtual (non-physical).	IESO	Boolean	Y/N	N/A	М

9.2.3 Bus

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique operating name used to identify bus in communications by participant, transmitter or IESO.	Participant	Free Text	N/A	N/A	M
NERC-defined Bulk Electric System Flag	Purpose: Does this equipment meet the "Bulk Electric System" (BES) definition of electrical components?	IESO	Boolean	Y/N	N/A	M
NPCC-defined Bulk Power System Flag	Purpose: Does this equipment meet the "Bulk Power System" (BPS) definition of electrical components?	IESO	Boolean	Y/N	N/A	М
Registration Status	Purpose: Indicate current registration status.	System and manual IESO	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Summer Continuous Rated Current (A)	Purpose: The maximum constant load that can be carried continuously without exceeding established temperature rise limitations. Ambient Temp: 35°C South of Barrie, 30°C North.	Participant	Integer	0-100,000	A	M
Winter Continuous Rated Current (A)	Purpose: The maximum constant load that can be carried continuously without exceeding established temperature rise limitations. Ambient Temp: 10°C.	Participant	Integer	0-100,000	А	M
Maximum Continuous Rated Voltage (kV)	Purpose: The highest rms line-to-line voltage at which the device is intended to operate.	Participant	Integer	0-999	KV	M
Short Circuit Withstand Capability (kA)	Purpose: A measure of the short circuit current a device can tolerate without being damaged when a fault occurs	Participant	Integer	0-9999	kA	M
Outage Reporting Required Flag	Purpose: Indicate whether outages to the equipment must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	М
Outage Criticality Level	Purpose: Criticality Level is used to determine equipment outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the equipment to the IESO for approval.	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0
	Mandatory if Outage Reporting Required Flag = "Y".					
Virtual Flag	Purpose: Indicate whether the equipment is virtual (non-physical).	IESO	Boolean	Y/N	N/A	М

9.2.4 Equipment Outage Viewer Group

A group of equipment/resource permitted for viewing by an external observer other than the IESO or the applicant (i.e. other than the owner or operator).

Attribute	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Viewership All	Purpose: Indicates whether outage request details can be viewed publicly.	Participant	Boolean	Y/N	N/A	М

9.2.5 UFLS Relay Group

A group of UFLS relays used for the purpose of UFLS implementation. UFLS Relay Group is required if the criteria for participation in the UFLS program are met. As a type of equipment, multiple UFLS Relay Groups can be registered in a facility. UFLS Relay Group only requires the following attributes to support outage management.

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Operating Nomenclature	Purpose: Unique name for the equipment.	IESO	Text	Format: ""UFLS" + Auto- assigned sequential	N/A	М
UFLS Relay Group Percentage	Purpose: The percentage of load that would be shed by the UFLS relay group. It's used to conduct UFLS threshold validation for outage management.	Participant	Numeric	number, i.e. UFLS 1 0.00-100.00	%	M
Registration status	Purpose: Indicate current registration status.	System and manual IESO	Dropdown	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Outage Reporting Required Flag	Purpose: Indicate whether outages to the equipment must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	М
Outage Criticality Level	Purpose: Criticality Level is used to determine equipment outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the equipment to the IESO for approval. Mandatory if Outage Reporting	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0

9.2.6 Master data verification

The IESO has populated facility, equipment and resource data from previously submitted registration forms. Prior to making any changes for existing facilities, equipment and resources, market participants must verify the relevant data and provide the IESO with any missing data.

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Verified flag	Purpose: Identifies that the owner has verified the registration data for all owned equipment and the related entities (e.g. Resource, connection point, commitment period, dynamic model, document, facility, circuit, control centre, compliance aggregation models). Organization, contacts, lookup value lists and IESO defined entities are not verified by the participant (e.g. Technology type, electric zone, subregion, balancing authority area/control area, UFLS Area, voltage	Participant	Boolean	No Yes	N/A	M
Verification date	Purpose: that date when the owner verified the registered entity	System	Date time stamp	N/A	N/A	M

10 Resources

10.1 Connection Point

Note: these include internal Ontario connection points and boundary entities, intertie zones etc.

Note: as with circuit, connection point is not equipment or a specialization of equipment so there is no need to use 'equipment name'.

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Connection Point Name	Purpose: Unique name for the equipment within a specified scope (e.g. windings unique within transformer but not within facility. I.e. The name by which the connection point is commonly known.	Solution (no manual override)	Text	Business rule: -connection point name is <facility name=""><voltage level=""><equipment name=""> -remove spaces from <facility name=""> -for <equipment name=""> use the first, non- circuit/circuit section equipment selected for the connection point -take the <voltage level=""> from the equipment [or from the circuit section (should be the same)]</voltage></equipment></facility></equipment></voltage></facility>	N/A	M

10.1.1 Generator Resource

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Resource Id	Purpose: Unique numeric identifier for each resource. Often included in reports or communications to participants	System	Integer	999999	N/A	M
Resource Name	Purpose: Unique identifier across all SCADA systems (e.g. EMS, MIS, etc.)	Solution / IESO	Text	Proposed by solution, confirmed by Market Registration.	N/A	М
Balancing Authority Area (area_id)	Purpose: Identifies the IESO control area (ONZN) or intertie zone in which the resource operates.	System: Computed Values—not recorded attributes	Text	Current list: ONZN MBSI MNSI MISI NYSI PQBE PQDA PQHA PQQC PQPC PQXY PQHZ PQDZ PQSK PQAT	N/A	M
Electrical Zone	Purpose: Facilities, equipment and resources are organized by electrical area for IESO Operations purposes. Calculated from equipment and facility electrical zone.	System: Computed Values–not recorded attributes	Text	Northeast, Northwest, Essa, Toronto, East, Ottawa, South, Southwest, Niagara, Bruce	N/A	М

LST-48 Register Facility Help File v8.0.docx

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Resource	Purpose: Identify the resource operating	Participant	Drop down	Cogeneration	N/A	М
Configuration	mode where the associated generating			Combined cycle		
	unit(s) are combustion turbines or			Simple cycle		
	steam turbines			Not applicable		
	Value is 'not applicable' unless primary					
	fuel is oil, gas, bio-fuel or steam.					
	Values are mutually exclusive.					
	 Cogeneration -exhaust is used to provide power or heat to a non- generation operation. 					
	 Combined cycle –Not Cogeneration and exhaust is used as fuel for generating unit. 					
	 Simple cycle if not cogeneration or combined cycle. 					

LST-48 Register Facility Help File v8.0.docx

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Pseudo Unit Modelling Election Flag	Purpose: market participant has elected to enable pseudo unit modelling as part of the day-ahead scheduling for this resource. Note that the CT resource could also operate independently of the Pseudo Unit. Note: This is the record of the participant's request to assign the resource as part of a PSU. Pseudo resource units are only used in the day-ahead market and not dispatched in real-time. They are only available to gas turbines and steam turbines at a single substation (facility) [only available to primary fuel types 'gas' and 'steam']. A Pseudo unit is automatically named with a PSU and the Combustion Turbine Resource name. For example: A combined cycle facility has two combustion turbines (1, 2) and one steam turbine (3).	System (set when create PSU)	Boolean	Y/N	N/A	0

Attributes	Definition		Submitted by	Data Type	Value Range	Unit of measurement	M/O
	Physical Resource	Pseudo Resource					
	Gas Turbine 1 (Unit-LT.G1)	Pseudo Unit 1					
	Steam Turbine 3 (Unit-LT.G3)						
	Gas Turbine 2 (Units-LT.G2)	Pseudo Unit 2					
	Steam Turbine 3 (Unit-LT.G3)	-					
	The Pseudo unit would be lab	elled as					
	PSU_UNIT-LT.G1						
	PSU_UNIT-LT.G2						
Generator Turbine Type	Purpose: Identify if any associated generating unit is a combustion or a steam turbines. Business Rule: Pseudo resourcy yes and generating unit primaring gas or steam. If there is a mix then n/a since be part of a PSU	on turbines ce Flag is ary fuel is	System: Computed Values—not recorded attributes	Text	CT ST Not applicable	N/A	M

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Steam Turbine Duct Firing Capacity	Purpose: Duct firing capacity is the capacity available from the duct firing of a physical steam turbine. For registration purposes, a single value of duct firing capacity will be provided and captured for a steam turbine resource. Derived from associated ST generating unit. Sum (add) Steam Turbine Duct Firing Capacity for all associated STs	System: Computed Values—not recorded attributes	Decimal number with validation	0-999	MW	0
Registration Status	Purpose: Indicate current registration status. For participants and IESO staff viewing records	System	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Bid/Offer Type	The participation for the resource in the IESO administered markets. This drop down menu determines how the participant will be dispatched or bid/offer in the market.	Participant	Drop down	Dispatchable Intermittent Generator Self-Scheduling Generator	N/A	М
Operating Reserve Class	Purpose: If the resource is dispatchable than and the fuel type is not wind or solar than the participant may elect to participate in the various operating reserve classes.	Participant	Drop Down if bid type above is dispatchable and fuel type is not wind / solar	All types, 30min non-spin, 10 min non-spin and 30 min, no Operating Reserve Validation –only allowed for dispatchable (disabled if not with 'Not applicable ' value)		M

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Resource at embedded facility	From equipment; facility (Connection Type)	System: Computed Values–not recorded attributes	Boolean	Y/N		0
Embedded Facility name	From equipment; facility	System: Computed Values–not recorded attributes	Text		N/A	О
Directly connected facility name	From equipment; facility (relationship)	System: Computed Values–not recorded attributes	Text		N/A	0
Connection point name	From connection point relationship	System: Computed Values–not recorded attributes	Text		N/A	M
Resource primary fuel type	Purpose: Identify the primary fuel used for the generating unit(s) associated to the resource. This is not a derived field	IESO	Drop down	List of fuel type for the associated gen unit	N/A	M
Resource secondary fuel type	Purpose: Identify the secondary fuel used for the generating unit(s) associated to the resource.	IESO	Drop down	As per gen unit	N/A	0
	This is not a derived field					

LST-48 Register Facility Help File v8.0.docx

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Real Time Energy Market Flag	Purpose: Identifies that this resource participates in the IESO administered physical market Values on resource creation/update (applies to all resource types) • Creation (new resource) submitted -> null; registered (=approved at end of RE) -> 'no'; commissioning/in-service -> 'yes' • Update Staging: submitted -> null; registered (=approved at end of RE) -> 'no'; commissioning/in-service -> 'yes' • During update there is no change to CDMS instance of resource which is in-service and has a value of 'y'	System	Boolean	Y/N	N/A	M
AGC Energy Market Flag	Purpose: Is this an AGC resource	IESO	Boolean	Y/N	N/A	М
Operational Compliance Aggregation Election	Purpose: Market participant has elected to include this resource as part of an operational compliance aggregation for dispatch instruction	System	Boolean	Y/N	N/A	0

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Control Deadband	Purpose: Unit control error deadband. When a unit's desired active power change is less than this deadband, then no control pulses will be sent to the unit. Value is provided only if AGC energy market flag is a "Y" otherwise N/A.	IESO	Decimal number 3.2	0-9999	MW	0
Control Pulse High	Purpose: Pulse high limit which is the largest control pulse that the unit can respond to. Value is provided only if AGC energy market flag is a "Y" otherwise N/A.	IESO	Decimal number 4.2	0-9999	MW	0
Control Pulse Low	Purpose: Pulse low limit which is the smallest control pulse that the unit can respond to. Value is provided only if AGC energy market flag is a "Y" otherwise N/A.	IESO	Decimal number 4.2	0-9999	MW	0
Control Response Rate	Purpose: Unit response rate which specifies the active power change for a control pulse of one second in the most responsive loading level of the unit. Value is provided only if AGC energy market flag is a "Y" otherwise N/A.	IESO	Decimal number 4.2	0-9999	MW/min.	0
Gen Control Mode	Purpose: The unit control mode. Value is provided only if AGC energy market flag is a "Y" otherwise N/A.	IESO	Free text	"on", "off" or on standby		0

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Gen Control Source	Purpose: The method of AGC control of the resource in following the IESO AGC signal (i.e. "pulse" or setpoint). Value is provided only if AGC energy market flag is a "Y" otherwise N/A.	IESO	Free text	"pulse" or "setpoint"		0
Gen Operating Mode	Purpose: This is the base point operating mode of the AGC signal to the resource. Value is provided only if AGC energy market flag is a "Y" otherwise N/A.	IESO	Free text	Auto, MBP (manual base point), MBPR (range)		0
High Control Limit	Purpose: This is the maximum output for operation while on AGC control. Value is provided only if AGC energy market flag is a "Y" otherwise N/A.	IESO	Decimal number 4.2	0-9999	MW	0
Low Control Limit	Purpose: This is the minimum output for operation while on AGC control. Value is provided only if AGC energy market flag is a "Y" otherwise N/A.	IESO	Decimal number 4.2	0-9999	MW	0
Minimum Generator Resource Capability (Winter)	Purpose: the sum of all Minimum Active Power Capability (winter) values of the connected generating units.	System	Decimal number with validation	0-9999	MW	M
Minimum Generator Resource Capability (Summer)	Purpose: The sum of all the Minimum Active Power Capability (Summer) values of the connected generating units.	System	Decimal number with validation	0-9999	MW	М

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Generator	Purpose: The sum of all the Rated Active	System	Decimal	0-9999	MW	М
Resource Rated	Power values of the connected		number with			
Active Power	generating units.		validation			
Maximum	Purpose: The sum of all the Maximum	System	Decimal	0-9999	MW	M
Generator	Continuous Active Power (-10 C		number with			
Resource	ambient) values of the connected		validation			
Capability (-10 C	generating units.					
ambient)						
Maximum	Purpose: The sum of all the Maximum	System	Decimal	0-9999	MW	М
Generator	Continuous Active Power (0°C ambient)		number with			
Resource	values of the connected generating		validation			
Capability (0°C	units.					
ambient)						
		_				
Maximum	Purpose: The sum of all the Maximum	System	Decimal number with	0-9999	MW	M
Generator Resource	Continuous Active Power (winter) values of the connected generating units.		validation			
Capability (Winter)	of the connected generating units.		validation			
Maximum	Purpose: The sum of all the Maximum	System	Decimal	0-9999	MW	M
Generator	Continuous Active Power (20°C ambient)	,	number with			
Resource	values of the connected generating		validation			
Capability (20°C	units.					
ambient)						
Maximum	Purpose: The sum of all the Maximum	System	Decimal	0-9999	MW	М
Generator	Continuous Active Power (summer)		number with			
Resource	values of the connected generating		validation			
Capability	units.					
(Summer)						

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Maximum Generator Resource Active Power Capability	Purpose: The sum of all the Maximum active power capability of all the connected generating units. This value is used to calculate the energy resource's maximum offer capability. This value will also be used to calculate the PSU's percent shared calculation.	System	Decimal number with validation	0-9999	MW	
Maximum Bid/Offer Ramp Rate	Purpose: The sum of all maximum ramp rate of the member generating units.	system	Decimal number with validation	0-9999	MW/Min	
Quick Start Flag	Purpose: Does this resource have generating units that are quick start capable?	Participant confirmed by IESO-MR	Boolean	Y/N Set by the participant at the resource (per rule "Does this resource have any generating units that are quick start capable?"). During resource approval by Market Registration the IESO can reject or approve.	N/A	M
Elapsed Time To Dispatch	Purpose: The minimum amount of time, in minutes, between the time at which a start-up sequence is initiated for a generation unit and the time at which it becomes dispatchable by reaching its minimum loading point;	Participant	Numeric Text		Min	M

LST-48 Register Facility Help File v8.0.docx

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Period of Steady Operation	Period of steady operation means a predefined number of intervals (0, 1, or 2) for which a non quick-start (quick-start flag is 'no') generation facility must maintain steady operation before changing direction of its energy output (either increasing or decreasing). (note: for non quick-start resources fuel type will be one of Bio Fuel, Coal (although obsolete now), Gas, Oil, Steam Use zero for quick start. Disable on form (not editable). Such a facility is considered to be in steady operation if the magnitude of change between dispatch instructions for the last two intervals is less than 0.1 multiplied by its ramp rate capability between the two intervals; Period of steady operation is specifically for slow moving units such as fossil or nuclear generating units and may also include combined cycle and cogeneration facilities. This value which	Participant	Must be a non-quick start generation resource, default is 0.	0,1,2	N/A N/A	M
	is stated in number of five-minute intervals, with a maximum value of 2, is used to ensure that units do not reverse direction without a minimum period of steady operation.					

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Minimum Run Time	(MRT) means the number of hours required for a generation facility to ramp from a cold start to its minimum loading point, plus the facility's minimum generation block run-time, as specified by the market participant in accordance with the technical requirements of the facility., Production Cost Guarantee (PCG) Flag needs to be Y, Day-Ahead Production Cost Guarantee (DA-GCG) flag needs to be "Y" Fuel type must be one of Bio Fuel, Coal, Gas, Oil, Steam Can only be provided on update to inservice resource.	Participant	Decimal Can expect one decimal place i.e. 6.5	0-25	Hr	0
Minimum Generation Block Run–Time	(MGBRT) means the number of hours, specified by the market participant, that a generation facility must be operating at or above minimum loading point, in accordance with the technical requirements of the facility., Production Cost Guarantee (PCG) Flag needs to be Y, Day-Ahead Production Cost Guarantee (DA-GCG) flag needs to be "Y" Fuel type must be one of Bio Fuel, Coal, Gas, Oil, Steam Can only be provided on update to inservice resource.	Participant	Whole number	0-24	Hr	0

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Minimum Loading Point (MLP)	(MLP) means the minimum output of energy specified by the market participant that can be produced by a generation facility under stable conditions without ignition support.	Participant	Numeric	0-999	MW	M
	Either or both of RT-Production Cost Guarantee (PCG) Flag needs to be Y, and Day-Ahead Production Cost Guarantee (DA-PCG) flag needs to be "Y" Fuel type must be one of Bio Fuel, Coal, Gas, Oil, Steam					
	Can only be provided on update to inservice resource.					
	0 =< MLP =< Maximum Generator Resource Active Power Capability					

LST-48 Register Facility Help File v8.0.docx

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Production Cost Guarantee (PCG) Flag	Purpose: does this resource qualify for PCG? Business rules, DA-GCG flag yes, RT-GCG flag "y", do values exist for MLP, MGBRT, MRT, is the resource a non-quick start and is the ETD greater than 60 minutes IF Quick Start = NO AND MLP > 0 MW AND MGBRT > 1 hour AND ETD > 60 min AND Registered Resource Primary Fuel Type is not 'URANIUM' ³ THEN PCG Eligibility Flag = YES ELSE PCG Eligibility Flag = NO	System	Boolean	Y/N	n/a	O

_

³ Nuclear generation resources must be excluded from receiving a DA-PCG

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Steam Turbine MLP	Purpose: The minimum loading point	Participant	Numeric		MW	0
(2 on 1)	of a steam turbine (ST) at a combined					
	cycle/cogeneration plant may differ					
	depending on the number of					
	combustion turbines that are in-					
	service. Additional ST MLPs are					
	required for all combined cycle /					
	cogeneration plant configurations					
	above the MLP submitted for a 1 CT on					
	1 ST.					
	Must be provided if the participant					
	owns two gas turbines at the same					
	facility as the steam turbine.					
	Available only to a generation					
	resource that has one generating unit					
	assigned to it, that has a primary fuel					
	source of steam and may be operating					
	in a combined cycle relationship that					
	has more that has 2 or more gas					
	turbine associated with it. (2 on 1					
	MLP) means the minimum output of					
	energy specified by the market					
	participant that can be produced by a					
	generation facility under stable					
	conditions without ignition support					
	when two gas turbines are in service.					
	Generation Online Eligibility Flag (SGOL)					
	Flag needs to be Y, Production Cost					
	Guarantee (PCG) Flag needs to be Y,					

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
	Day-Ahead Production Cost Guarantee (DA-GCG) flag needs to be "Y"					
	Enabled if the resource primary or					
	secondary fuel type is steam. Since it is					
	not populated under all conditions, it is					
	deemed Optional so users understand that an empty value is valid.					
Steam Turbine MLP	Purpose: The minimum output of	Participant	Numeric		MW	0
(3 on 1)	energy specified by the market					
	participant that can be produced by a					
	generation facility under stable					
	conditions without ignition support					
	when three gas turbines are in service					
	Must be provided if the participant					
	owns three gas turbines at the same					
	facility as the steam turbine.					
	Available only to a generation					
	resource that has one generating unit					
	assigned to it, that has a primary fuel					
	source of steam and has a combined					
	cycle relationship that has more that					
	has three or more gas turbine					
	associated with it. (3on 1 MLP) means					
	the minimum output of energy					
	specified by the market participant					
	that can be produced by a generation					
	facility under stable conditions					
	without ignition support when three gas turbines are in service. Generation					
	gas turbines are in Service. Generation	<u> </u>				

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
	Online Eligibility Flag (SGOL) Flag needs to be Y, Production Cost Guarantee (PCG) Flag needs to be Y, Day-Ahead Production Cost Guarantee (DA-PCG) flag needs to be "Y" Enabled if the resource primary or secondary fuel type is steam.					
Steam Turbine MLP (4 on 1)	Purpose: The minimum output of energy specified by the market participant that can be produced by a generation facility under stable conditions without ignition support when four gas turbines are in service Must be provided if the participant owns four gas turbines at the same facility as the steam turbine. Available only to a generation resource that has one generating unit assigned to it that has a primary fuel source of steam and has a combined cycle relationship that has more than 4 or more gas turbine associated with it. (4 on 1 MLP) means the minimum output of energy specified by the market participant that can be produced by a generation facility under stable conditions without ignition support when four gas	Participant	Numeric		MW	0

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
	turbines are in service. Generation Online Eligibility Flag (SGOL) Flag needs to be Y, Production Cost Guarantee (PCG) Flag needs to be Y, Day-Ahead Production Cost Guarantee (DA-GCG) flag needs to be "Y" Enabled if the resource primary or secondary fuel type is steam.					
Day-Ahead Production Cost Guarantee (DA- PCG) election flag	Purpose: the participant wishes their resource to participate in the Day-Ahead PCG Program. Non-quick start units; Fuel type must be one of Bio Fuel, Coal (although obsolete now), Gas, Oil, Steam	Participant	Boolean	Y/N	N/A	M
Real Time Eligibility Flag (RT-PCG) election Flag	Purpose: the participant wishes that their resource participate in the RT-PCG Program. Non-quick start units; Fuel type must be one of Bio Fuel, Coal, Gas, Oil, Steam	Participant	Boolean	Y/N	N/A	М
Eligible Energy Limited Resource Resubmission (EELR) Flag	Purpose: Resource has associated generating units that are EELR enabled. Business Rule: resource EELR resubmission flag is yes if at least one associated generating unit has the 'Unit Eligible Energy Limited Generation Unit' flag as 'yes'.	System: Computed Values–not recorded attributes	Boolean	Y/N	N/A	М
Number of Forbidden Regions	Purpose: Forbidden regions are specifically for hydraulic (fuel type is	Participant	Drop Down maximum of 3	0,1,2 ,3	N/A	0

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Attributes	'water' only) generating units. These regions up to a maximum of 3 are accompanied by an upper and lower limit measured in MW and are intended to ensure equipment safety. These values will allow the IESO to not schedule facilities within these predefined operating ranges. If submitted, forbidden regions should meet the following criteria: • Forbidden region 1 Lower Limit shall be greater than or equal to 0, • Forbidden region 1 Upper Limit shall		Data Type	Value Range		М/О
	 be greater than forbidden region 1 Lower Limit, Forbidden region 2 Lower Limit shall be greater than forbidden region 1 Upper Limit, Forbidden region 2 Upper Limit shall be greater than forbidden region 2 Lower Limit, Forbidden region 3 Lower Limit shall be greater than forbidden region 2 Upper Limit, Forbidden region 3 Upper Limit shall be greater than forbidden region 3 Lower Limit. 					

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Forbidden Region 1	See above	Participant	Numeric text.	Example lower limit 2	MW	
– Lower Limit			Allow one			
			decimal. Range			
			Lower limit			
Forbidden Region 1	See above	Participant	Numeric text.	Upper limit 5	MW	
– Upper Limit			Allow one			
			decimal. Range			
			Upper limit			
Forbidden Region 2	See above	Participant	Numeric text.	Example lower 6	MW	0
– Lower Limit			Allow one			
(MW)			decimal. Range			
			Lower limit			
			(needs to be			
			greater than			
			upper limit of			
- 1:11			1)			
Forbidden Region 2	See above	Participant	Numeric text.	Upper limit 9	MW	0
– Upper Limit			Allow one			
			decimal. Range			
			Upper limit			
			(needs to be higher than			
			lower limit 2)			
Forbiddon Pogion 2	See above	Darticipant	Numeric text.		MW	0
Forbidden Region 3 – Lower Limit	See above	Participant	Allow one		IVIVV	U
- Lower Limit			decimal.			
Forbidden Region 3	See above	Participant	Numeric text.		MW	0
– Upper Limit	JEE above	Farticipant	Allow one		IVIVV	
оррег Епппе			decimal.			

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Daily Cascading Hydroelectric Dependency (DCHD) resource	Purpose: Identifies the upstream cascading hydroelectric generation resource that is controlled by the same registered market participant if the resource has a Minimum Hydraulic Time Lag of less than 24 hours to or from the cascading resource. The resource furthest upstream does not have a DCHD.	Participant	Integer	N/A	N/A	O
Outage Reporting Required Flag	Purpose: Indicate whether outages to the resource must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	М
Outage Criticality Level	Purpose: Criticality Level is used to determine resource outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the resource to the IESO for approval.	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0
	Mandatory if Outage Reporting Required Flag = "Y".					

10.1.2 Pseudo Unit

A pseudo unit is a resource that can be offered into the day-ahead market but not into the real-time market.

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Pseudo Unit Name	Purpose: Unique identifier across all SCADA systems (e.g. EMS, MIS, etc.)	Solution / IESO	Text	Proposed by solution, confirmed by enrolment specialist. 'PSU_' CT resource name	N/A	M
Resource Id	Purpose: Unique numeric identifier for each resource. Often included in reports or communications to participants	Solution	Integer	999999	N/A	M
Registration Status	Purpose: Indicate current registration status.	System	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Steam turbine percentage share	This will determine the capacity of the PSU resource. For example, if the Steam Turbine is 100 MW and each gas turbine is 100 MW, if the participant submits a percentage allocation of 50% the Pseudo unit would be resource gas turbine + steam turbine x PSU percentage.	Participant	Percentage (integer)	0-100	%	M

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Maximum Generator Resource Capability (Winter)	Purpose: the sum of all the Maximum continuous Active Power (winter) values of the connected generating units.	System (derived field)			MW	
	For downstream system and review by Market Registration and participant					
Maximum Generator Resource Capability (Summer)	Purpose: The sum of all the Maximum continuous Active Power (summer) values of the connected generating units.	System (derived field)			MW	

10.1.3 Load Resource

• Note: See section 11 Demand Response for load resources participating in the Demand Response programs.

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Resource Name	Purpose: unique identifier across all SCADA systems (e.g. EMS, MIS, etc.)	Solution / IESO	Text	Proposed by solution, confirmed by enrolment specialist	N/A	М
Resource Id	Purpose: Unique numeric identifier for each resource. Often included in reports or communications to participants	Solution	Integer	999999	N/A	M
Registration Status	Purpose: Indicate current registration status. For participants and IESO staff viewing records	System	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Bid/Offer Type	The type of interaction for this resource in the IESO administered markets. This drop down menu determines how the participant will be bid in the market.	Participant	Drop Down	Dispatchable Non-Dispatchable	N/A	М
Operating Reserve Class	If the resource is dispatchable and a load the participant may elect to participate in the various operating reserve classes.	Participant	Drop Down	All types, 30min non-spin, 10 min non-spin and 30 min, no Operating Reserve Validation –only allowed for dispatchable (disabled if not with 'Not applicable ' value)	N/A	M

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Real Time Energy Market Flag	Purpose: Identifies that this resource participates in the IESO administered physical market	System	Boolean	'N' until System sets flag to yes on approval of NFN if no commissioning or on approval of commission (i.e. as moving to in- service state)	N/A	M
AGC Energy Market Flag	Purpose: Is this an AGC resource Note: This value should be automated depending on the AGC values on generating unit	IESO	Boolean	Y/N	N/A	M
Balancing Authority Area	Purpose: Identifies the IESO control area (ONZN) or intertie zone in which the resource operates.	System: Computed Values–not recorded attributes	Text	Current list: ONZN MBSI MNSI MISI	N/A	M
	For all other resources the area is ONZN.			NYSI PQBE PQDA PQHA PQQC PQPC PQXY PQHZ PQDZ PQDZ PQSK PQAT		

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Electrical Zone	Purpose: Facilities, equipment and resources are organized by electrical area for IESO Operations purposes. Calculated from equipment and facility electrical zone.	System: Computed Values—not recorded attributes	Text	Northeast, Northwest, Essa, Toronto, East, Ottawa, South, Southwest, Niagara, Bruce	N/A	M
Maximum Registered Dispatchable Load	Purpose: Where the load resource is dispatchable (bid/offer type is 'dispatchable'), this is the sum of the load and associate motors for all the loads associated to this resource. I.e. the sum of 'Total peak load - Active Power' from all loads. If the load resource is not dispatchable the value is 'null'.	System	Numeric value allow one decimal place	0 to 9999	(MW)	M
Minimum Registered Dispatchable Load	Purpose: Where the load resource is dispatchable (Market Flag = yes), this is the minimum load point for the resource. If the load resource is not dispatchable the value is 'null'.	Participant	Numeric value allow one decimal place	0 to 9999	(MW)	0

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Maximum Bid/Offer Ramp Rate	Purpose: Identifies the maximum ramp rate the resource can provide. Calculated as the sum of all Maximum Registered Ramp Rate of the member loads.	System	Integer	0-9999	MW/Min	
	Note: This field depends on the maximum of either the raise ramp rates on the load.					
Resource at embedded facility	From equipment; facility (Connection Type)	System: Computed Values–not recorded attributes	Boolean	Y/N		0
Embedded Facility name	From equipment; facility	System: Computed Values–not recorded attributes	Text		N/A	0
Directly connected facility name	From equipment; facility (relationship)	System: Computed Values—not recorded attributes	Text		N/A	0
Connection point name	From connection point relationship	System: Computed Values–not recorded attributes	Text		N/A	M

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Outage Reporting Required Flag	Purpose: Indicate whether outages to the resource must be reported to the IESO for assessment.	IESO	Boolean	Y/N	N/A	M
Outage Criticality Level	Purpose: Criticality Level is used to determine resource outage request submission requirements. It determines how far in advance the market participant must submit an outage request for the resource to the IESO for approval. Mandatory if Outage Reporting Required Flag = "Y".	IESO	Dropdown	1=Critical 2=Non-Critical 3=Low-Impact	N/A	0

10.1.4 Transmission Connection Resource

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Resource Name	Purpose: unique identifier across all SCADA systems (e.g. EMS, MIS, etc.)	Solution / Participant (transmitte r)	Text	Proposed by solution, confirmed by participant.	N/A	M
Resource Id	Purpose: Unique numeric identifier for each resource. Often included in reports or communications to participants	Solution	Integer	999999	N/A	M

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Registration Status	Purpose: Indicate current registration status. For participants and IESO staff viewing records	System	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Transformation Connection Flag	Purpose: Specify if the transmission customer will be charged fees for the use of Transformation Connection facilities (i.e. transformation station facilities that step down the voltage from above 50 kV to below 50 kV are categorized as the No - Customer owns transformer and does not pay charge. Yes — transmitter owns transformer and customer pays charge	Participant (transmitte r)	Boolean	Y/N	N/A	M

LST-48 Register Facility Help File v8.0.docx

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Line Connection Flag	Purpose: Specify if the transmission customer will be charged fees for the use other electrical facilities (i.e. that are neither Network nor Transformation). No - Customer owns other electrical facilities and does not pay charge. Yes — transmitter owns other electrical	Participant (transmitte r)	Boolean	Y/N	N/A	M
Balancing Authority	facilities and customer pays charge Purpose: Identifies the IESO control area	System:	Text	Current list:	N/A	M
Area	(ONZN) or intertie zone in which the resource operates.	Computed Values—not recorded attributes	Text	ONZN MBSI MNSI MISI NYSI PQBE PQDA PQHA PQQC PQPC PQXY PQHZ PQDZ PQSK PQAT	N/A	IVI

2022-03-02 Page **170** of **186**

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Electrical Zone	Purpose: Facilities, equipment and resources are organized by electrical area for IESO Operations purposes. Calculated from equipment and facility electrical zone.	System: Computed Values–not recorded attributes	Text	Northeast, Northwest, Essa, Toronto, East, Ottawa, South, Southwest, Niagara, Bruce (please use CDMS numbering system and 1 – N/A, 2 – Bruce, etc.)	N/A	M
Connection Point Name	From connection point relationship	System: Computed Values–not recorded attributes	Text		N/A	М
Directly Connected Facility Name	From equipment; facility (relationship)	System: Computed Values–not recorded attributes	Text		N/A	0

10.1.5 Transmission Network Resource

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	М/О
Resource Name	Purpose: Unique identifier across all SCADA systems (e.g. EMS, MIS, etc.)	Participant (transmitte	Text	Proposed by solution, confirmed by market rule.	N/A	М
		r)				

2022-03-02 Page **171** of **186**

LST-48 Register Facility Help File v8.0.docx

	by	Data Type	Value Range	Unit of measurement	M/O
Purpose: Unique numeric identifier for ach resource. Often included in reports or communications to participants	Solution	Integer	999999	N/A	M
curpose: Indicate current registration tatus. or participants and IESO staff viewing ecords	System	Drop down	Verified (system), Commissioning (system), Registered (system) Long term Shutdown (manual), Deregistered (system), IESO maintained (system)	N/A	M
Purpose: Identifies the IESO control area ONZN) or intertie zone in which the esource operates. or all other resources the area is ONZN.	System: Computed Values—not recorded attributes	Text	Current list: ONZN MBSI MNSI MISI NYSI PQBE PQDA PQHA PQHC PQCC PQPC PQXY PQHZ PQDZ	N/A	M
o e u O e	ch resource. Often included in reports communications to participants irpose: Indicate current registration atus. Ir participants and IESO staff viewing cords Irpose: Identifies the IESO control area NZN) or intertie zone in which the source operates.	ch resource. Often included in reports communications to participants Irpose: Indicate current registration atus. Ir participants and IESO staff viewing cords Irpose: Identifies the IESO control area NZN) or intertie zone in which the source operates. Computed Values—not recorded attributes	ch resource. Often included in reports communications to participants Irpose: Indicate current registration atus. Ir participants and IESO staff viewing cords Irpose: Identifies the IESO control area NZN) or intertie zone in which the source operates. In participants and IESO staff viewing cords Irpose: Identifies the IESO control area Values—not recorded attributes	ch resource. Often included in reports communications to participants Impose: Indicate current registration atus. Impose: Indicate current registration at	ch resource. Often included in reports communications to participants Impose: Indicate current registration atus. System Drop down Verified (system), Commissioning (system), Registered (system), Registered (system), Long term Shutdown (manual), Deregistered (system), IESO maintained (system) IESO maintaine

2022-03-02 Page **172** of **186**

LST-48 Register Facility Help File v8.0.docx

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Electrical Zone	Purpose: Facilities, equipment and	System:	Text	Northeast, Northwest,	N/A	M
	resources are organized by electrical	Computed		Essa, Toronto, East,		
	area for IESO Operations purposes.	Values–not		Ottawa, South,		
		recorded		Southwest, Niagara, Bruce		
	Calculated from equipment and facility	attributes		(please use CDMS		
	electrical zone.			numbering system and 1 –		
				N/A, 2 – Bruce, etc.)		
Connection Point	From connection point relationship	System:	Text		N/A	M
Name		Computed				
		Values-not				
		recorded				
		attributes				
Directly Connected	From equipment; facility (relationship)	System:	Text		N/A	0
Facility Name		Computed				
		Values-not				
		recorded				
		attributes				

2022-03-02 Page **173** of **186**

10.2 Settlement Compliance Aggregation Model

Note: registration status is derived from registration status of the associated resources

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Compliance Aggregation Model type	Purpose: Identifies the aggregation model functionality for the selected resources. Compliance Aggregation and Meter Disaggregation are the functionalities within MDMS which permit measured generation from multiple facilities to be aggregated and then apportioned to the delivery points associated with the Compliance Aggregation / Meter Disaggregation Model. The apportionment is performed by applying a proportionality factor based on dispatch instructions to the aggregation summary meter.	Participant	Drop down	Compliance aggregation Meter disaggregation	N/A	M
Compliance Aggregation Model Name	Purpose: Unique identifier for the model.	Participant	Text	N/A	N/A	М
Settlements Service Start Date	Purpose: This is the date that the Compliance Aggregation / Meter Disaggregation Model will become active in the MDMS system.	Participant IESO	Date		N/A	0

2022-03-02 Page **174** of **186**

10.3 Operations Compliance Aggregation Model

Note: registration status is derived from registration status of the associated resources

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Compliance Aggregation Model type	Purpose: Identifies the aggregation model functionality for the selected resources: Operational Compliance Aggregation.	Participant	Drop down	Operational Compliance Aggregation	N/A	M
Compliance Aggregation Model Name	Purpose: Unique identifier for the model.	Participant IESO	Text	N/A	N/A	M
Operations Service Start Date	Purpose: This is the date that the Compliance Aggregation / Meter Disaggregation Model will become active in the operations real-time systems.	Participant IESO	Date			М

2022-03-02 Page **175** of **186**

LST-48 Register Facility Help File v8.0.docx

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Compliance Aggregation Dead band	Purpose: This is the operational dispatch variance allowed for compliance with dispatch instructions For more details on how this deadband is calculated, please refer to The IESO Compliance bulletin found on the IESO's external webpage	IESO	Numeric whole number	0-999	MW	M

2022-03-02 Page **176** of **186**

11 Demand Response

The demand response market participants providing demand response capacity obligation with transmission connected load facilities or with embedded load facilities that are revenue metered by the IESO must register their resources as hourly demand response or as dispatchable loads (for example, a non-dispatchable load could be registered as hourly demand response) and submit the demand response capacity per resource at least three months prior to the beginning of the commitment period.

As part of the contributor management and registration process, the demand response market participant must submit information for each contributor to be associated to their registered demand response resource(s) through Online IESO. Each demand response market participant is responsible for maintaining the contributor registry throughout their commitment period, which may include a combination of virtual (LDC revenue metered) and/or physical (non-dispatchable loads) contributors.

11.1 DR Resource

All participants that have received a demand response capacity obligation shall register resources with the IESO to meet their demand response capacity obligation as either an hourly demand response (HDR) resource (to represent non-dispatchable and/or virtual loads) or as a dispatchable load (DL) resource.

Demand response contributors that can be registered to meet a demand response capacity obligation:

- 1. HDR associated with commercial/industrial (C&I) loads can have:
 - a. Virtual C&I contributors; and
 - b. Physical (non-dispatchable) contributors;
- 2. HDR associated with residential loads can have only:
 - a. Virtual residential contributors

A physical DR resource can be fulfilled though registering a (5-min) dispatchable or an (Hourly) non-dispatchable load resource where the demand response market participant (DRMP) must be the same as the load owner of that resource.

Business Rule: Dispatchable load resources used for Demand Response:

- Have a commitment period
- Have different business rules for the system to derive selected fields as specified in the following table. Note that DR resource is a type of load resource.
 Hence all load resource attributes and related business rules are applicable to DR resources.

2022-03-02 Page **177** of **186**

LST-48 Register Facility Help File v8.0.docx

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Dispatch Type	Purpose: Identifies the real-time dispatch period.	Participant	Drop Down	5-minute Hourly	N/A	М
	Added for DR resources. Applicable to all dispatchable resources which currently will be '5-minute'.					
Minimum Registered Dispatchable Load	Purpose: Where the load resource is dispatchable (Market Flag = yes), this is the minimum load point for the resource	Participant	Numeric value allow one decimal place	N/A	(MW)	0
	If the load resource is not dispatchable the value is 'not applicable'					
	Not relevant for DR resource since ETL/records (via market resource data view) will use capability from commitment period					

2022-03-02 Page **178** of **186**

11.2 Resource DR Participations (lookup table)

These are the Demand Response participations applicable to the load resource (which must also be a dispatchable load resource)

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Demand Response Participation	These are the DR participations applicable to the load resource.	Participant	Multi-select but resource cannot be in both pilot and auction	 DR Market Participant Pilot DR Market Participant Action CBDR 	N/A	Μ

11.3 Demand Response Resource Commitment

The Demand Response Resource Commitment is the capability that the DR resource will contribute to fulfill the participant's DR obligation for a given commitment period.

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
DR Capability	Purpose: The value indicates the capacity the DR resource will contribute to fulfill the participant's DR obligation. This value must be less than or equal to the resource's maximum capacity and less than or equal to the participant's DR obligation.	Participant -DR Owner	Numeric value allow one decimal place	0 to 9999	(MW)	M

2022-03-02 Page **179** of **186**

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Capability Effective Date	Purpose: This is the date from which the related DR resource will start contributing the DR capability towards the related DR obligation.	Participant -DR Owner	Date			M

11.4 DR Contributor

A DR contributor is an interruptible load that contributes DR capacity to a virtual hourly demand response (HDR) resource.

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
DR Capacity	Purpose: The value indicates the maximum capacity that the contributor is able to deliver for DR purpose.	Participant –DR Owner	Numeric value allow one decimal place	0 to 9999	(MW)	М
Comments	Purpose: Participant supplied comments	Participant –DR Owner	Free text			0
Contributor Type	Purpose: Physical NDL or non-revenue virtual meter	Participant –DR Owner	N/A	1 and 2		М
Contributor Effective Date	Purpose: The date from which the contributor is effective to deliver the DR capacity	Participant -DR Owner	Date			М

2022-03-02 Page **180** of **186**

11.5 Virtual DR Contributor

Virtual DR contributors are the contributors that are not operationally visible to the IESO. These contributors contribute DR capacity to the virtual DR resource. There are two type of Virtual DR Contributor: Residential DR Contributor and Non-Residential DR Contributor.

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Name	Purpose: The name of the virtual contributor	Participant –DR Owner	Text			М
Address	Purpose: Address of the contributor	Participant -DR Owner	Text			M
LdcLDC account no	Purpose: The LDC account number of the contributor	Participant –DR Owner	Text			M

11.6 Residential DR Contributor

A residential DR contributor is an interruptible residential load that contributes DR capacity to a virtual hourly demand response (HDR) resource.

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Treatment Contributors Capacity (MW)	Purpose: Total curtailment capacity in Megawatts	Participant –DR Owner	Number	≥1		М
Number of Treatment Contributors	Purpose: Total number of treatment group contributors	Participant -DR Owner	Number			M
Number of Control Contributors	Purpose: Total number of control group contributors	Participant –DR Owner	Number			М
Comments	Purpose:	Participant –DR Owner	Text			М

2022-03-02 Page **181** of **186**

11.7 Non-Residential DR Contributor

Non-Residential contributors are only associated with virtual DR Resources and represent Industrial, Commercial and Institutional loads.

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Other IESO DR Initiatives	Purpose: This flag indicated whether the contributor is participating in any other DR initiatives administered by the IESO.	Participant -DR Owner	Flag	Y/N		M
Other IESO DR Initiatives Description	Purpose: To provide detailed description about other DR initiatives that this DR contributor is related to.	Participant –DR Owner	Free text			0
Data Acquisition Method	Purpose: This field captures the method using which the meter data from the contributor will be captured by the IESO	Participant –DR Owner	Drop down menu	Direct from Meter, LDC provided		М
Premise Id	Purpose: A unique identifier of the premise related to the contributor	Participant -DR Owner	Text			M

11.8 DR Contributor SLD

DR Contributor SLD captures the technical details of the related virtual DR contributor.

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Doc version	Purpose: This captures the current version of the SLD file	Participant –DR Owner	Number			M
SLD file	Purpose: Name of the SLD file	Participant –DR Owner	Attachment			М

2022-03-02 Page **182** of **186**

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Comments	Purpose: Comments supplied by the participant	Participant –DR Owner	Text			М

11.9 DR Contributor ROI

This entity captures the technical details of a meter installation that measures the energy flow within a DR contributor. A DR contributor may have multiple meter installations.

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Doc version	Purpose: This captures the current version of the ROI file	Participant –DR Owner	Number			M
ROI file	Purpose: Name of the ROI file	Participant –DR Owner	Attachment			M
Comments	Purpose: Comments supplied by the participant	Participant –DR Owner	Text			М

11.10 DR Behind the Meter Generator

This entity captures the details of the generator unit(s) that is installed behind the meter that provides the meter data for the contributor.

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Model number	Purpose: The model number of the behind the meter generator associated with the DR contributor	Participant –DR Owner	Text			M
Name plate capacity	Purpose: The capacity of as given on the nameplate of the behind the meter generator associated with the DR contributor	Participant -DR Owner	Text			M

2022-03-02 Page **183** of **186**

Attributes	Definition	Submitted by	Data Type	Value Range	Unit of measurement	M/O
Fuel type	Purpose: The type of the fuel used by the behind the meter generator associated with the DR contributor	Participant –DR Owner	Text			M
Load following	Purpose: The declaration that technology is in place to ensure no generation is injected to the grid	Participant –DR Owner	Toggle	Y/N		M

2022-03-02 Page **184** of **186**

12 Capacity Commitments

12.1 Capacity Resource Commitment

This entity captures the registration details for the successful sale of capacity to an external jurisdiction.

Table 12-1: Capacity Resource Commitment

Attribute Name	Business Definition	Submitted by	Data Type	Value Range	Opt.
Capacity Resource Commitment id	Unique numeric id for commitment	System	Number	N/A	М
Registration Status	Status of commitment registration	System	Number	Pending Verification, Registered	M
Cleared MW	Capacity export that has been committed to the external jurisdiction for each month of the Commitment Period.	Participant	Number	N/A	М
Capacity vehicle Cleared document Id	Document id with notice of auction/contract result(s) Appian id if commitment is pending verification Citadel id if commitment is registered	System	Number	N/A	М
Capacity vehicle Cleared document Name	Document name with notice of auction/contract result(s)	Participant / System ⁴	Text	N/A	М

⁴The participant uploads the document. The system computes the name and files the document.

2022-03-02 Page **185** of **186**

Attribute Name	Business Definition	Submitted by	Data Type	Value Range	Opt.
Capacity vehicle type	Indicates if the commitment was awarded through an auction or a contract.	System ⁵	Text	Auction, Contract	M
Capacity Auction Type	Auction purpose and commitment period duration	Participant	Text	Strip, Monthly, Spot, Annual Auction	0
Commitment start date (effective date)	Date on which the commitment starts. Must be 1 st day of calendar month. May differ from the commitment period start for monthly auctions if offers cleared for only selected months or for different MW in different months.	System	Date	N/A	M
Commitment end date (end date)	Date on which the commitment ends. Must be last day of calendar month end unless end-dated (see next line). May differ from the commitment period start for monthly auctions if offers cleared for only selected months or for different MW in different months.	System	Date	N/A	M
	May differ from the commitment period end if commitment was changed (i.e. replaced by a later record)				ı

2022-03-02 Page **186** of **186**

⁵ The system retrieves values dictated by the approved capacity assessment request (e.g. capacity vehicle type, commitment start and end dates)